


■■■ Installation instructions for Franke faucet with swing spout

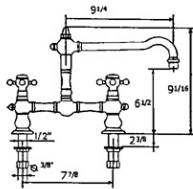

■■■ **Limited Warranty.** Congratulations on the purchase of a Franke product. Franke is one of the world's largest manufacturers of kitchen systems worldwide. Our products are manufactured using the highest degree of technology, quality and design. As a result, we are proud to offer the following warranty.

■■■ Franke, Inc., Kitchen Systems Division, warrants the quality of its faucets to be free from manufacturing defects for a period of five (5) years from the date of purchase. The flexible hose is warranted for two (2) years from the date of purchase.

■■■ This warranty applies only to the original owner, providing the product has been installed in accordance with our installation instructions, used as recommended and in a normal residential application. In the event of a warranty claim, the owner will be required to provide proof of purchase. This warranty covers all components which make the product operational. Franke, at its option, may repair or replace the product or components necessary to restore the product to good working condition. Franke reserves the right to inspect the installation prior to the actual replacement of the product or component part.

■■■ **Design.** These faucets are available in chrome, chrome-brass, satin-nickel and satin-nickel/brass to match Franke sink accessories. The elegant rising spout has a high clearance from sinktop level giving plenty of room to fill or wash pots. This clearance is particularly important with accessorized sinks where the accessories bring the bowl to countertop level when in use.

■■■ **Care of finish.** These faucets have been carefully manufactured. The chrome, chrome-brass, satin-nickel or satin-nickel/brass surfaces will maintain their appearance for a long time, provided they are cleaned using a soft cloth, water and soap. NEVER use an abrasive cleanser (liquid or powder) or any scouring pad on this faucet.

■■■ Technical data

Maximum water pressure:	75 PSI
Maximum hot water temperature:	175° F
Recommended hot water temperature:	150° F
Tailpipe connections:	3/8" O.D.

■■■ This warranty does not cover misuse or abuse, accidental damages, scuffs or scratches improper installation, abnormal usage, negligence or damage caused by improper maintenance or cleaning. Normal wear of parts is excluded from warranty. Damage caused by impurities or acts beyond our control are not covered. Any product or part which has been repaired or altered in any manner outside of Franke's factory, unless previously authorized in writing by Franke, will void warranty. Any replacement excludes transportation and any labor reinstallation costs. This warranty does not allow recovery of incidental or consequential damages such as loss of use, delay, property damage or other consequential damage, and Franke accepts no liability for such damages.

■■■ The Franke warranty is limited to the above conditions and to the warranty period specified herein and is exclusive. Franke **DISCLAIMS** all other warranties, expressed or implied, including the **IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE**. This warranty gives you specific legal rights which may vary from state to state

■■■ **Attention.** Before installing the faucet SUPPLY LINES MUST BE FLUSHED to remove scale, solder or other impurities and prevent them from entering the faucet.

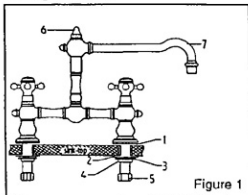


Figure 1

■■■ **Installation**

- 1) position the rubber seals (1) between the mixer body and the sink-top
- 2) fit the fiber seals (2), washers (3) and locknuts (4)
- 3) tighten the 2 locknuts (4)
- 4) connect the hot and cold water using pipe/tap connectors (5)
- 5) turn on the water supply and check for tightness

 
■■■ **Replacement of "O" ring seals in the column (see Figure 1):**

- 1) undo the cap nut (6) using a 20 mm spanner
- 2) lift off the washer and the swivel spout (7)
- 3) replace the 2 "O" ring seals and grease them
- 4) refit the swivel spout, the washer and the cap nut and tighten -

■■■ **Maintenance on mechanisms.**

Under normal operating conditions, Franke faucets do not require any maintenance. They are unaffected by scaling or corrosion.


■■■ **Head replacement**



- 1) shut off the cold and hot water inlets
- 2) unscrew the top (1)
- 3) undo the screw (2) and take off the crosspiece (3)
- 4) unscrew the head to be replaced
- 5) screw in the new head
- 6) refit the crosspiece (3) with its screw (2)
- 7) refit the top (1)
- 8) turn on the water supplies
- 9) check for tightness

■■■ **Aerator cleaning:** if water outlet clogged with stain deposit or impurities, you can unscrew the aerator plate to clean it.

■■■ **Replacement parts for dual control sink bridge mixer, long spout**

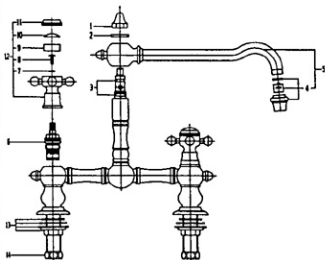

Pos. PART NAME

Part #

1.	Nut	OE51163
2.	Column top ring	OE51162
3.	ORings	OE00100NT910
4.	Aerator complete	OE00100402
5.	Spout complete	OE0100400
6.	Ceram.disc mech,3/4 turn	OE09619ASA
7.	Washer	OE91025
8.	Screw	OE3813
9.	Ring	OE51150
10.	Ceramic insert Hot/Cold	OE51153
11.	Retaining ring	OE51151
12.	Handle complete	OE00100113
13.	Fixation set	OE00100NT901
14.	Inlet fitting 1/2"	OE1361802BR