

 
 
 
 
 
 
 
 
 
 
 
 
 
 


 
 
 
 
 
 
EN

 
INSTALLATION MANUAL

 
 
 
 
 
FPJ 625 V BK/SS
FPJ 625 V WH/SS

EN Warning! Before proceeding with installation, read the Recommendations and Suggestions in the User Manual.

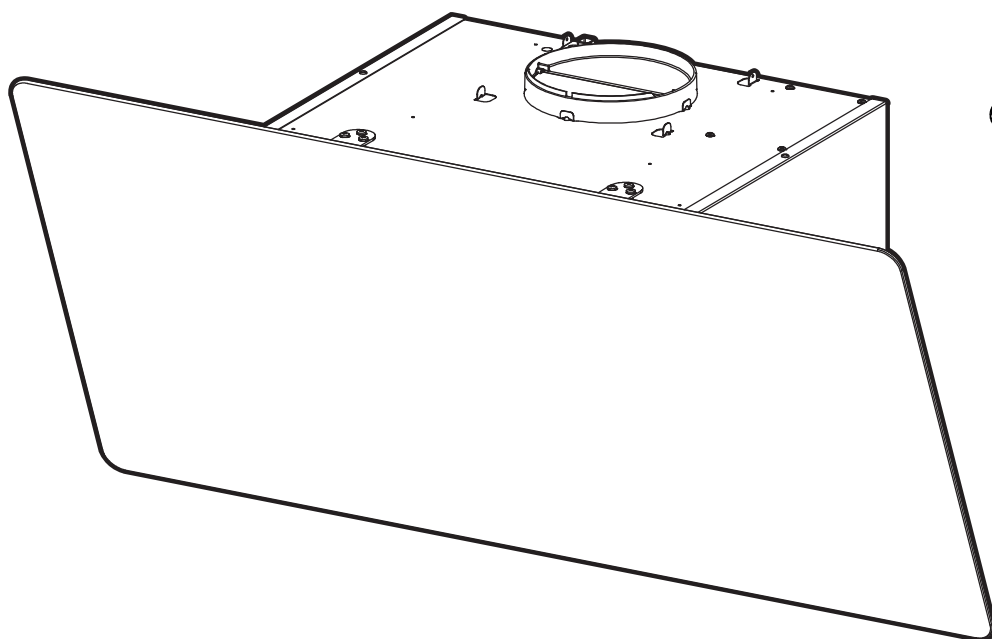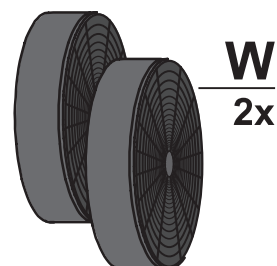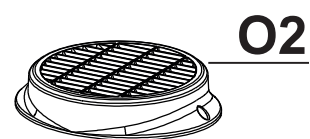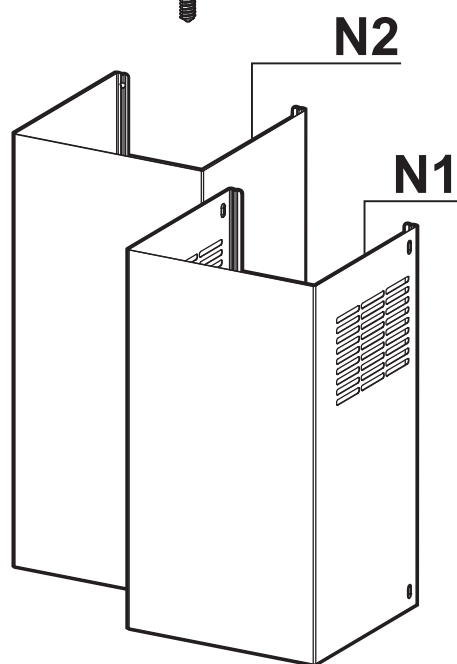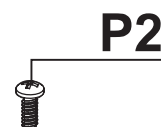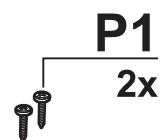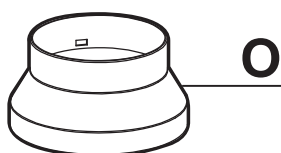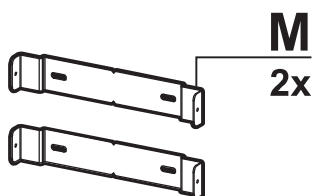
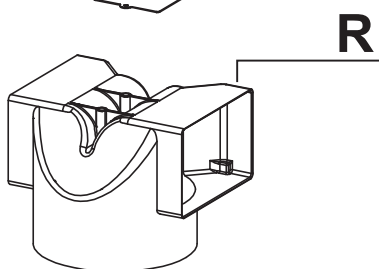
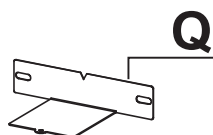
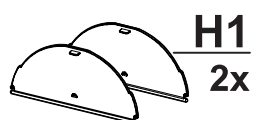
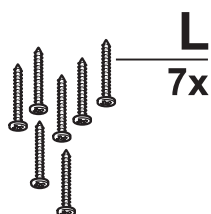
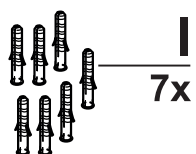
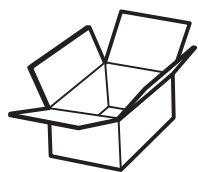


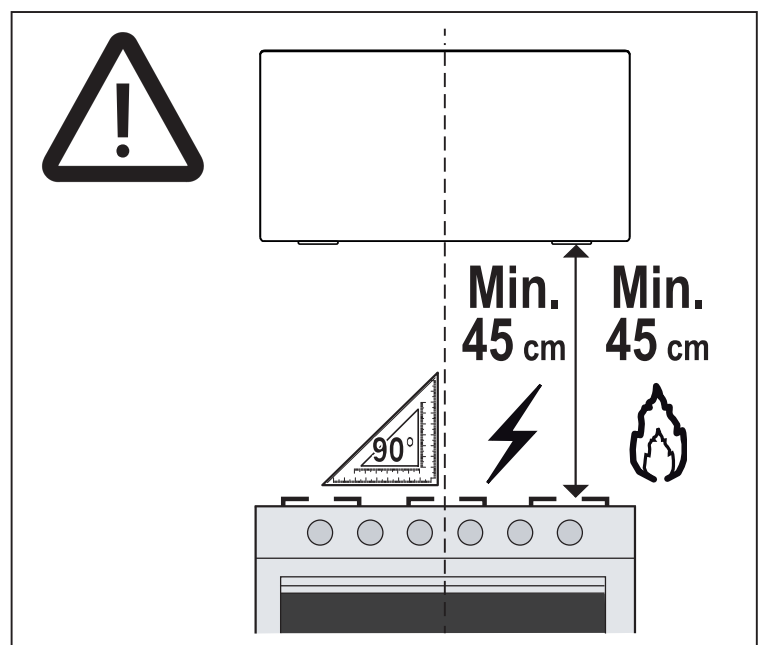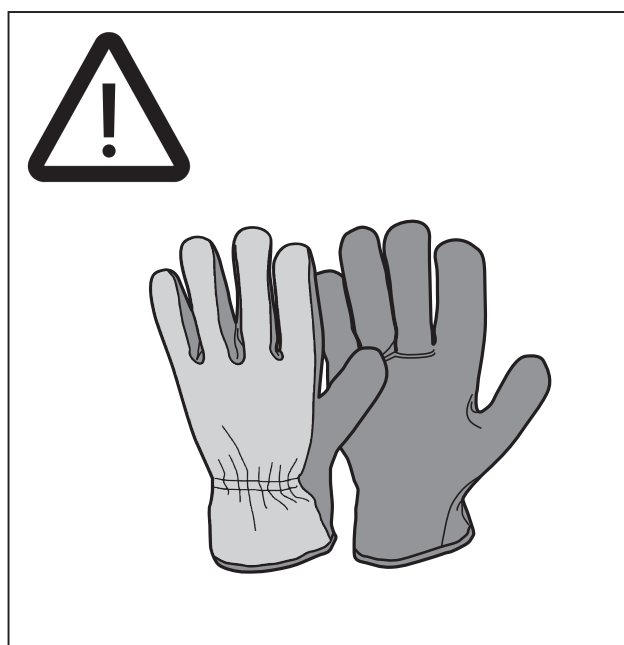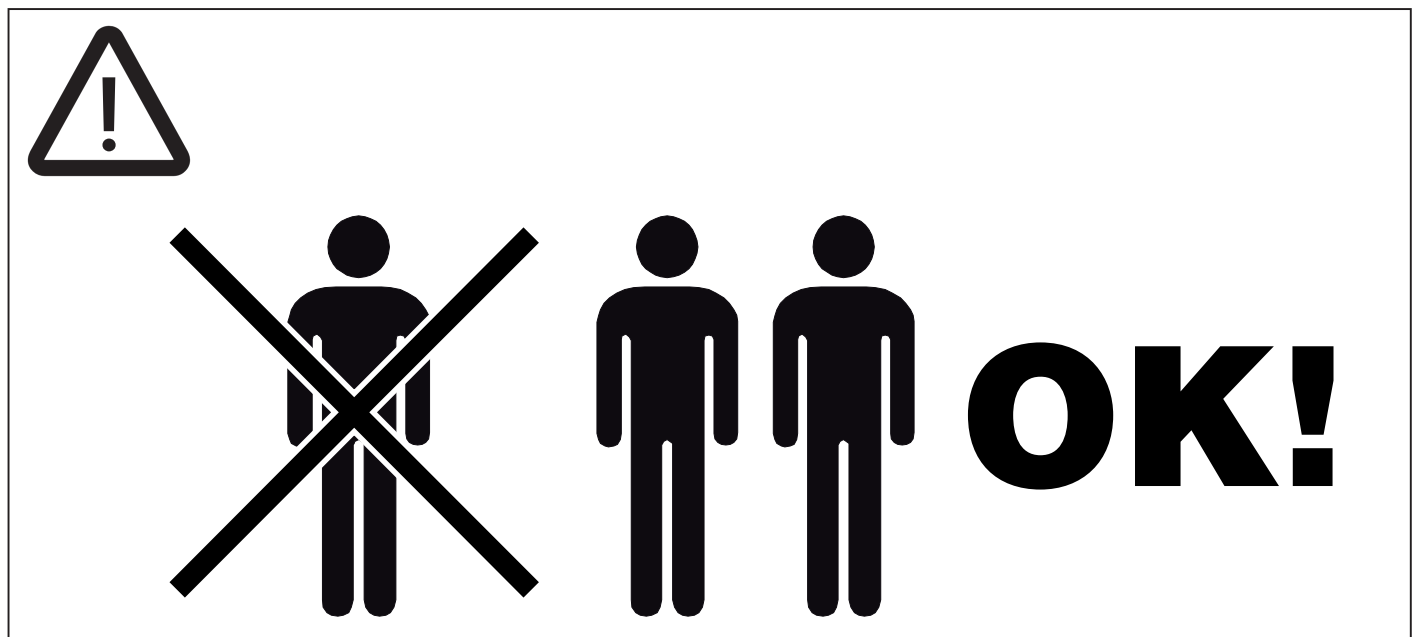
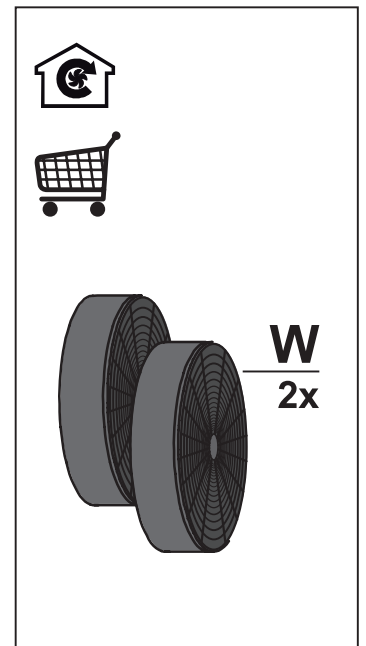
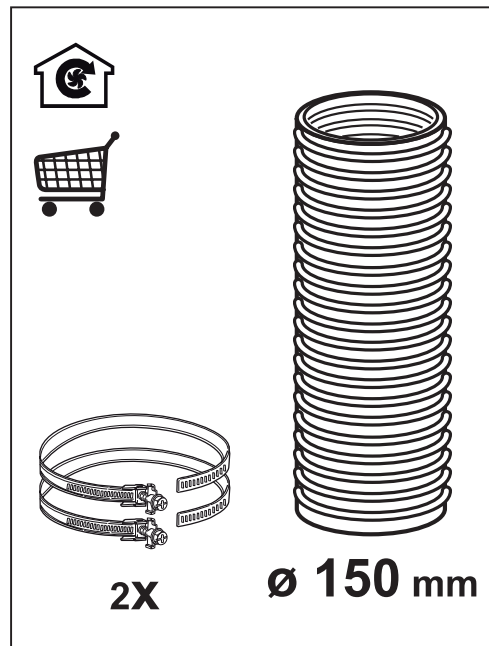
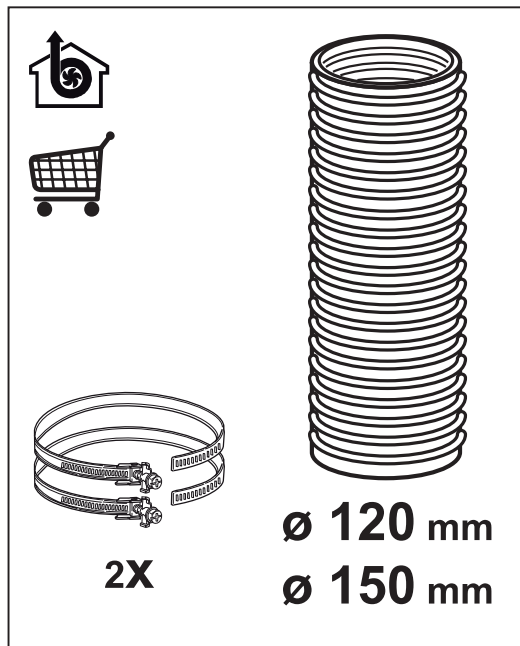





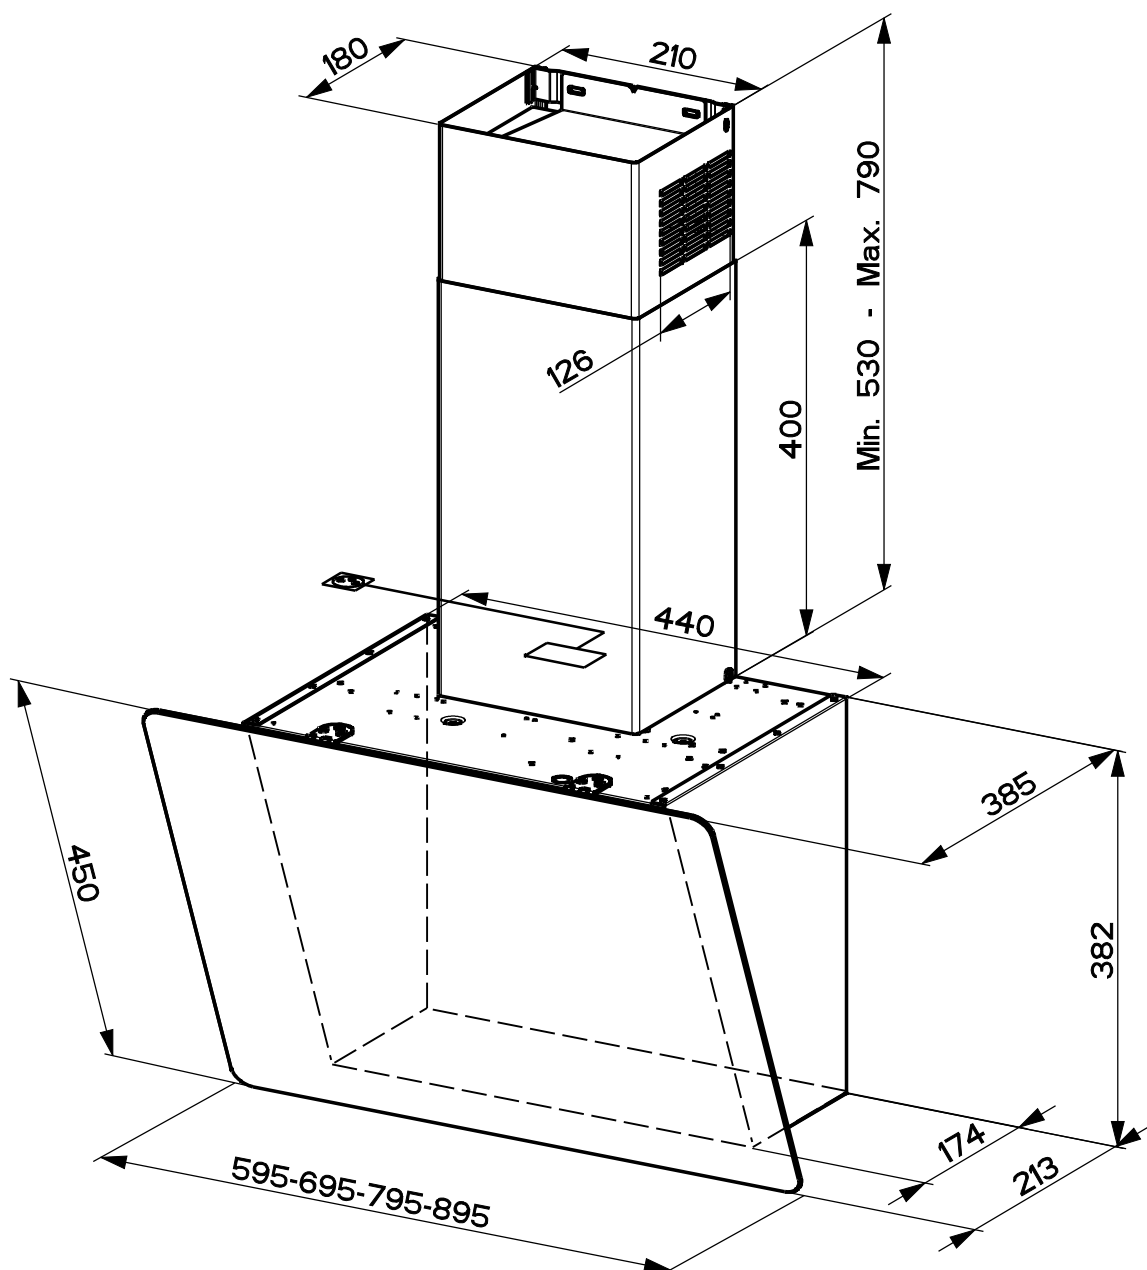


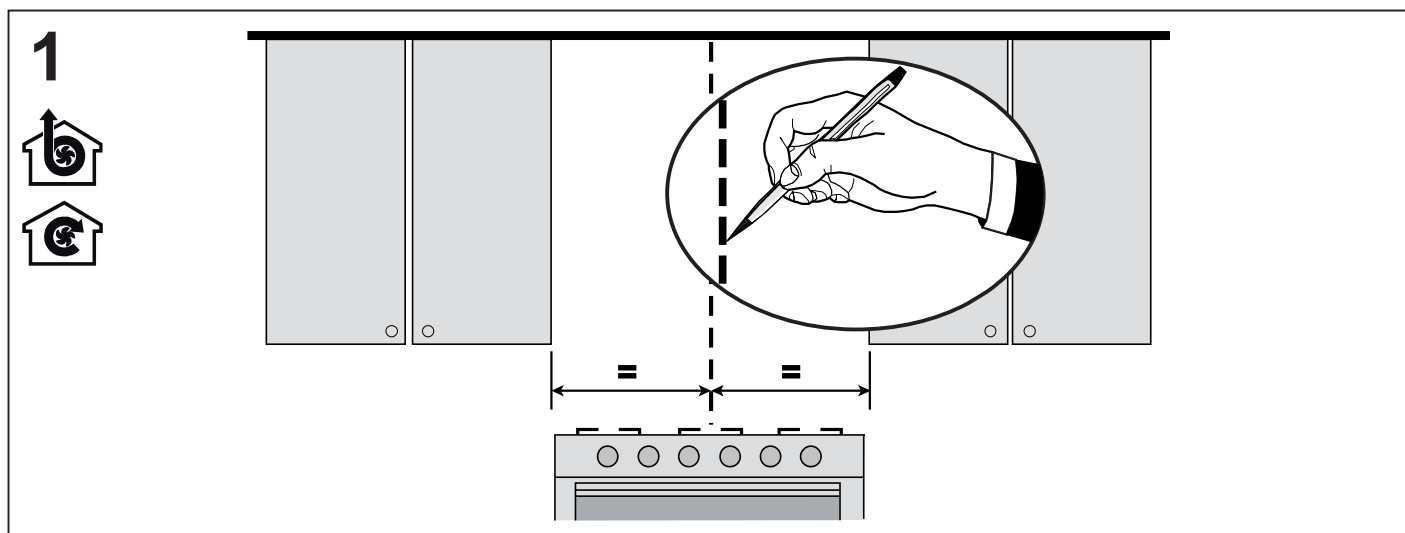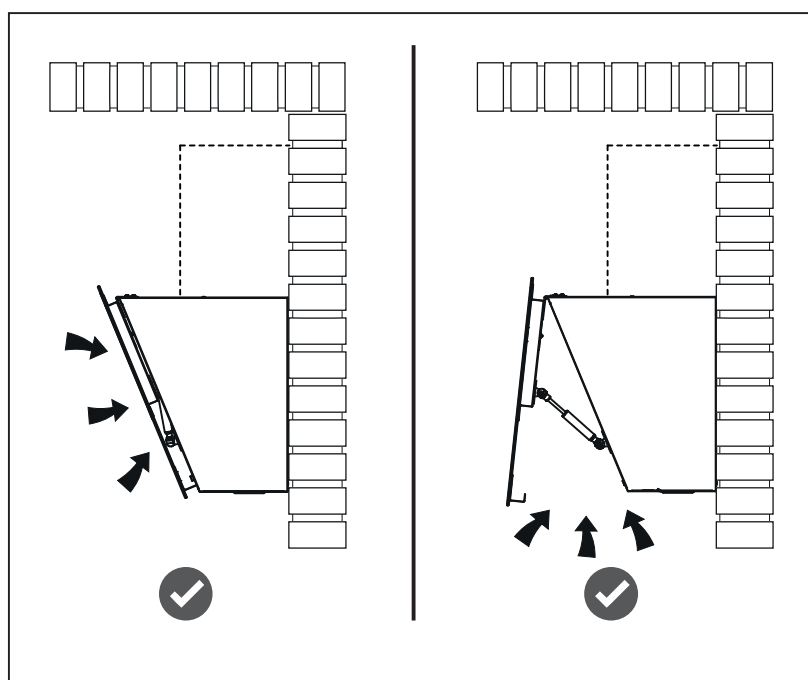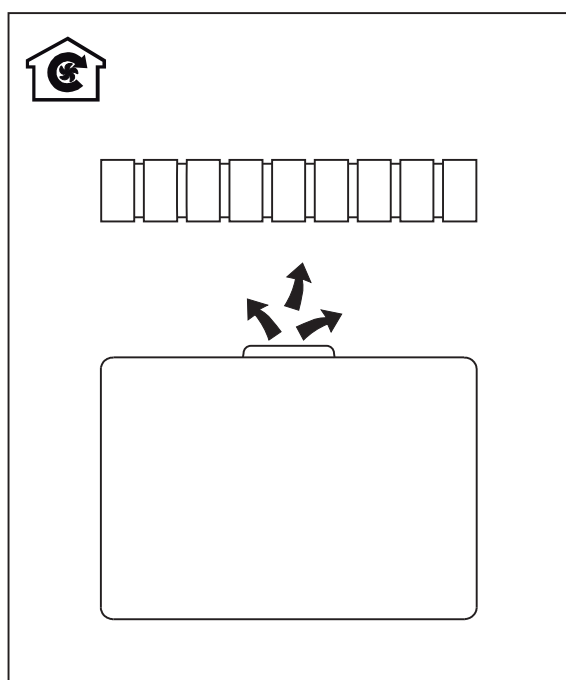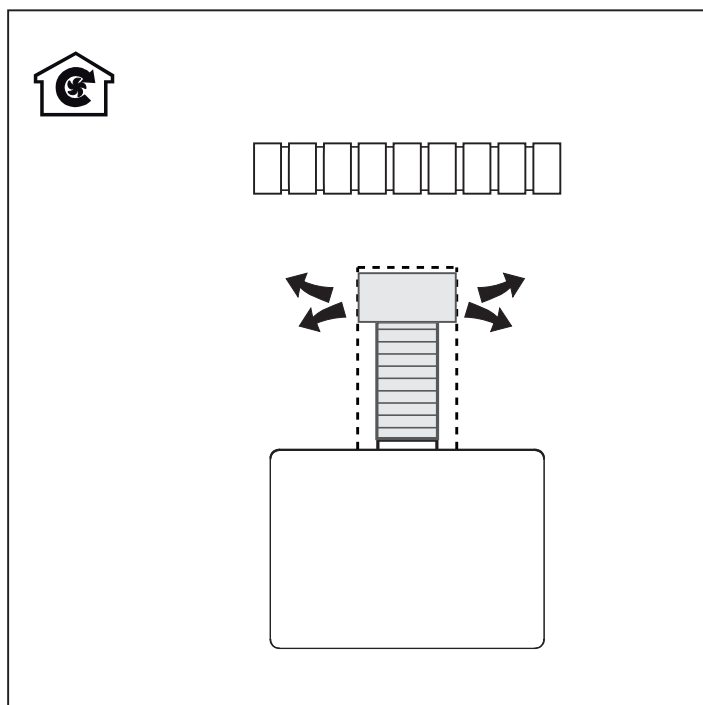
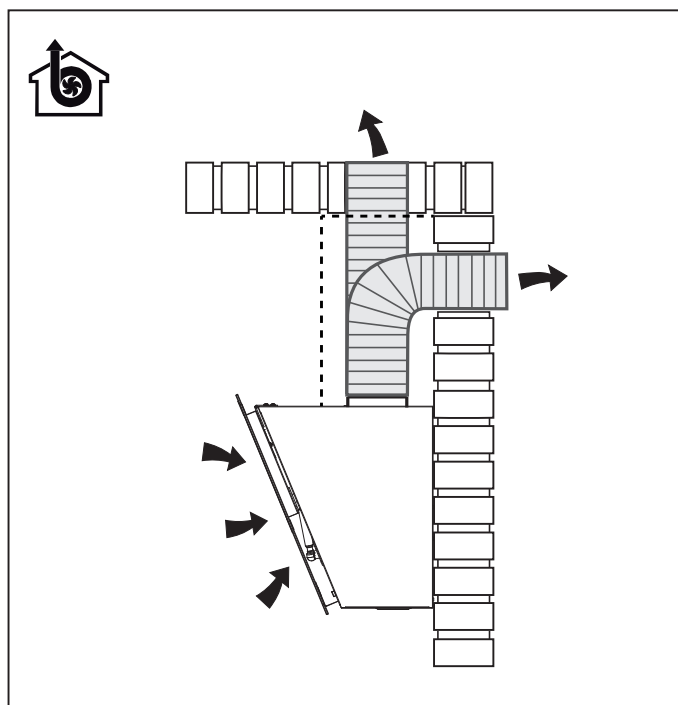


2

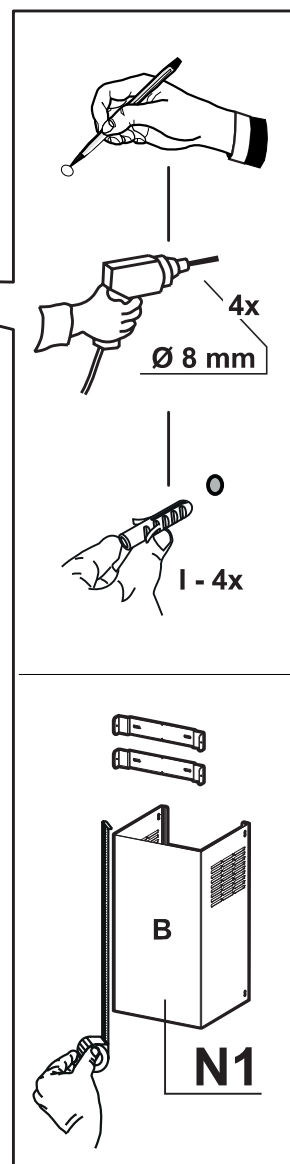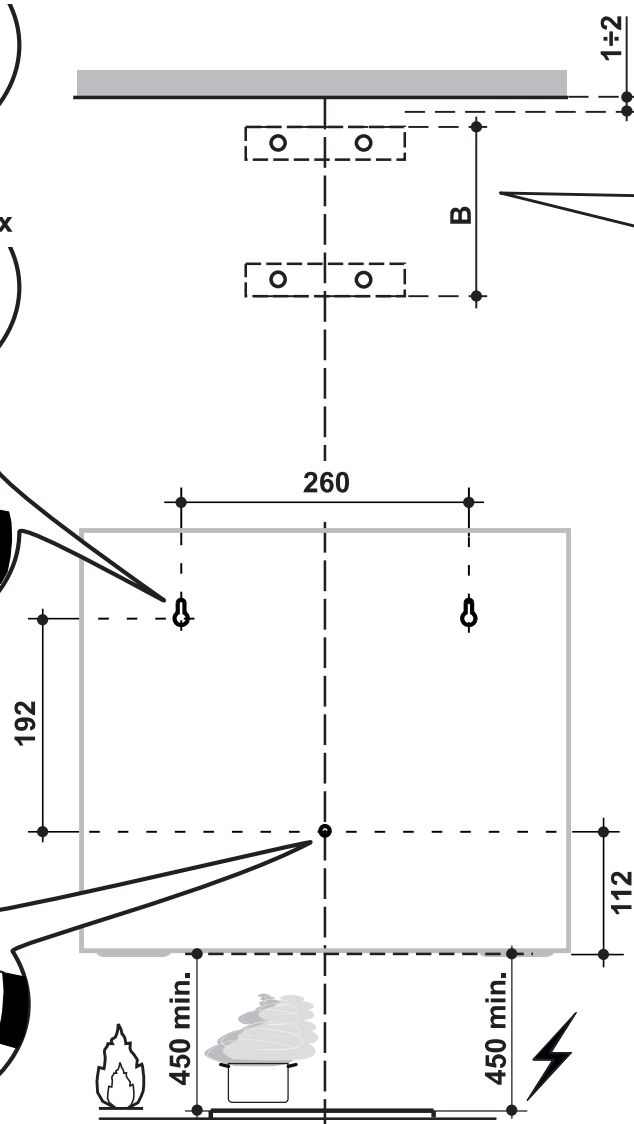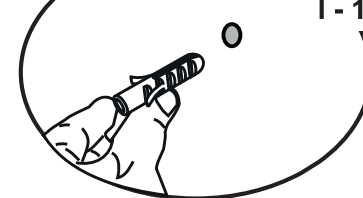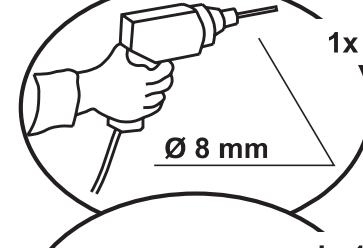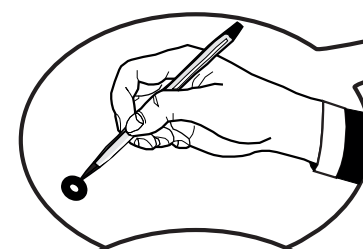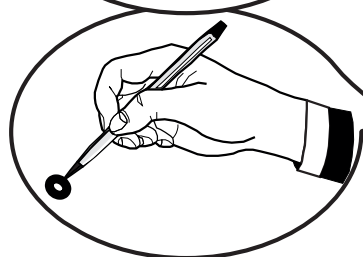      
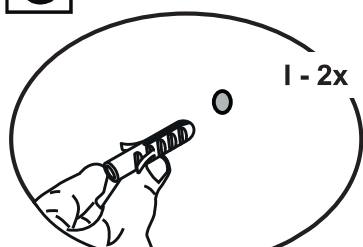 


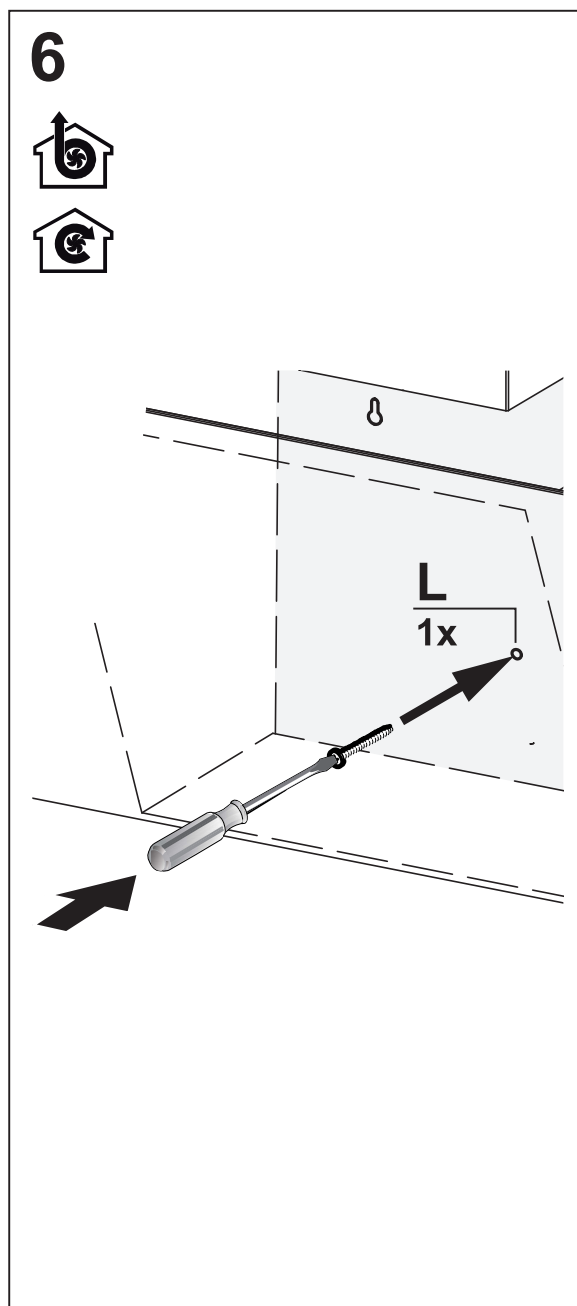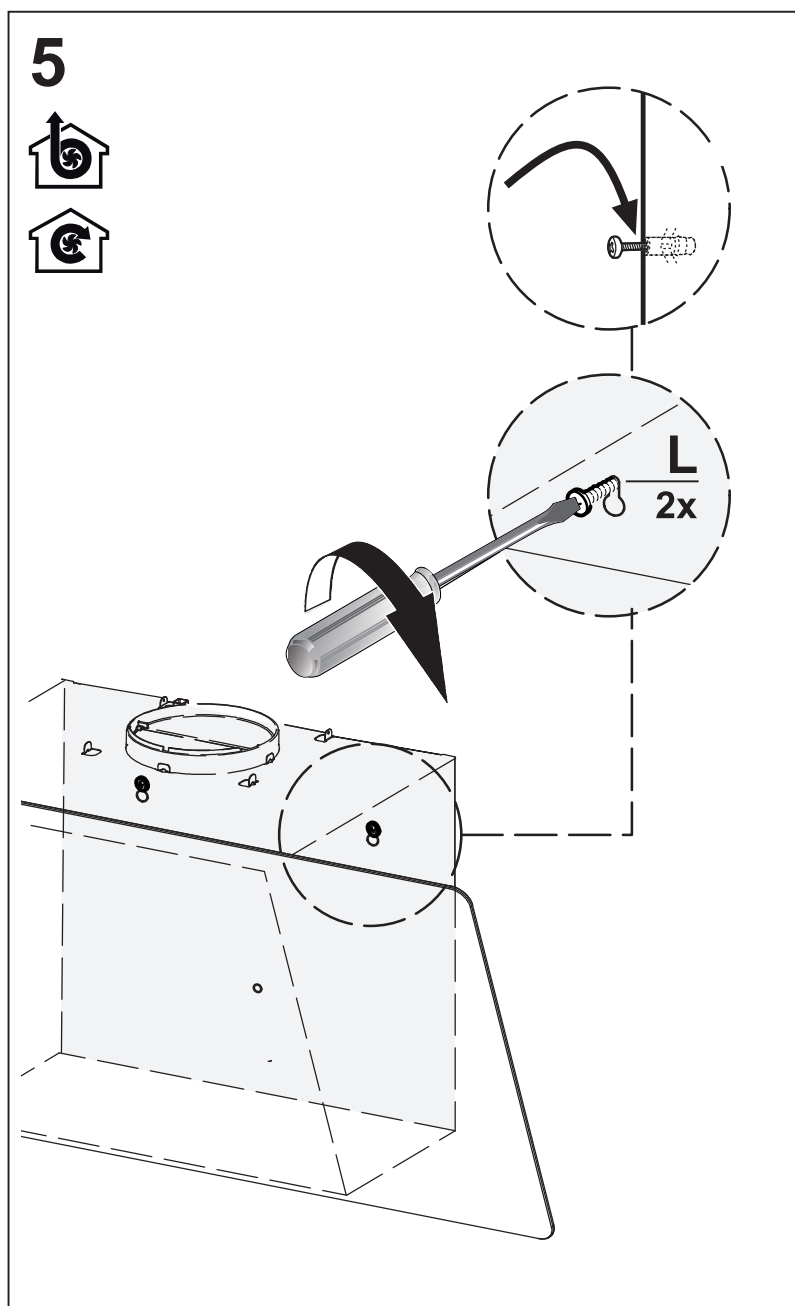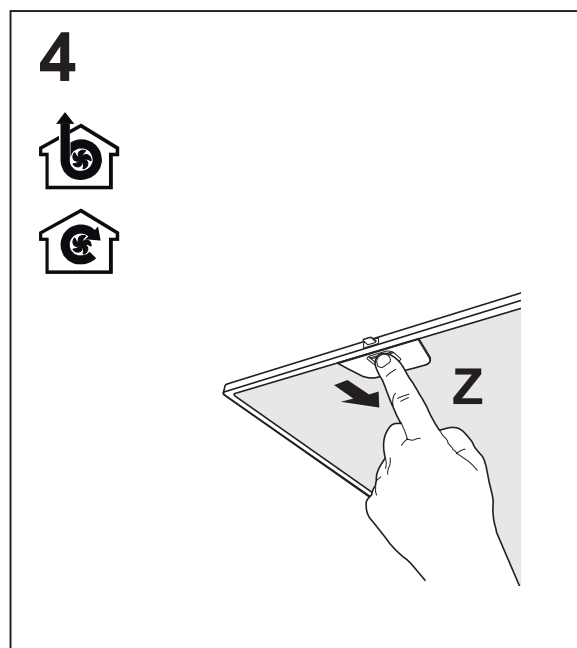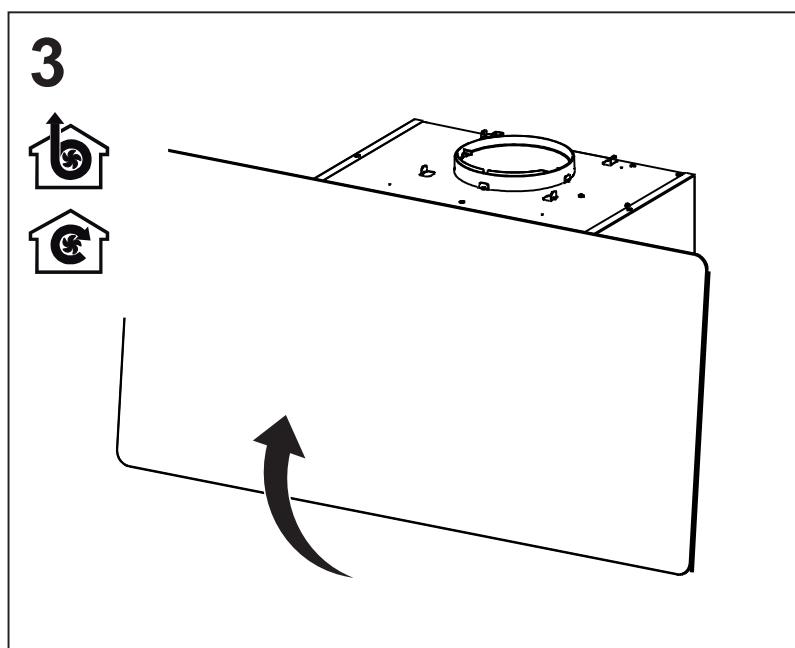    

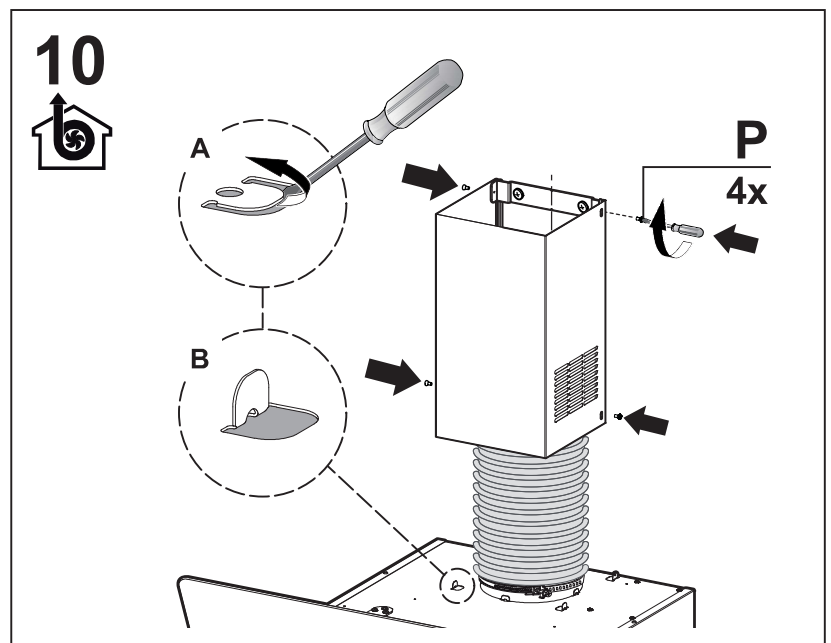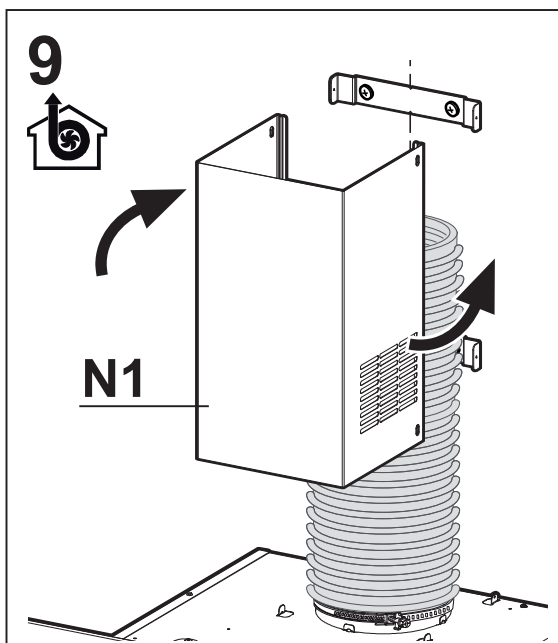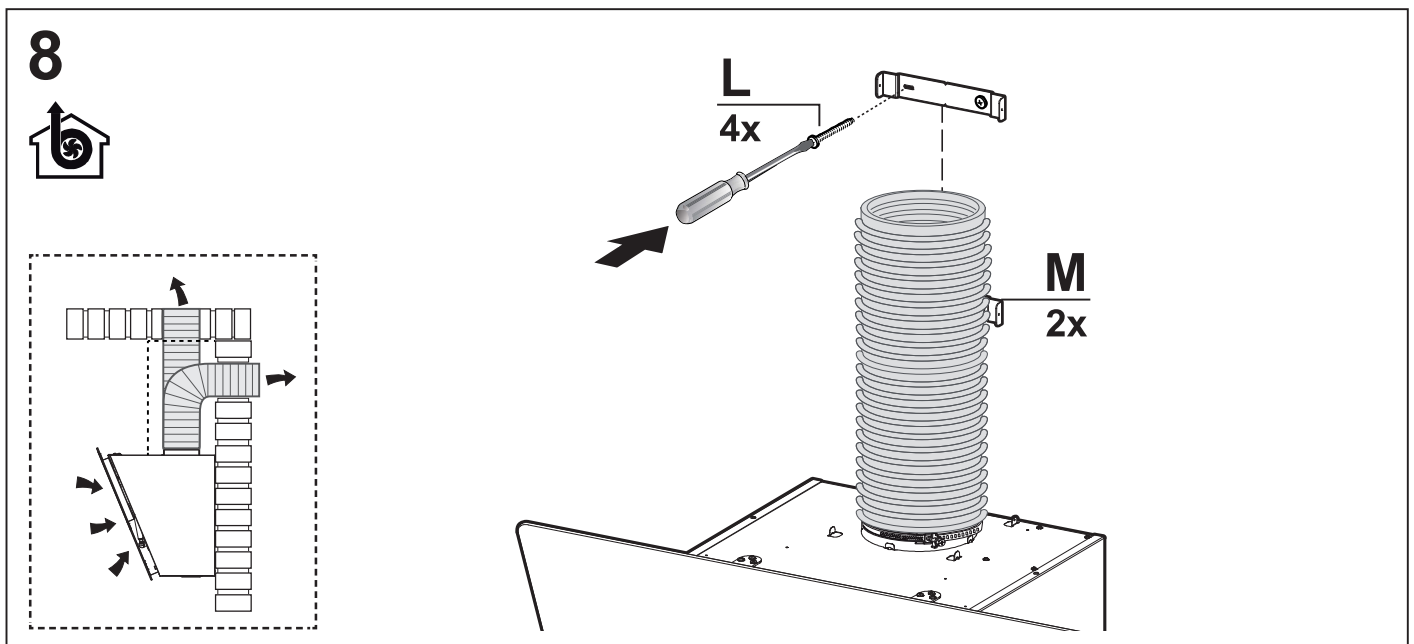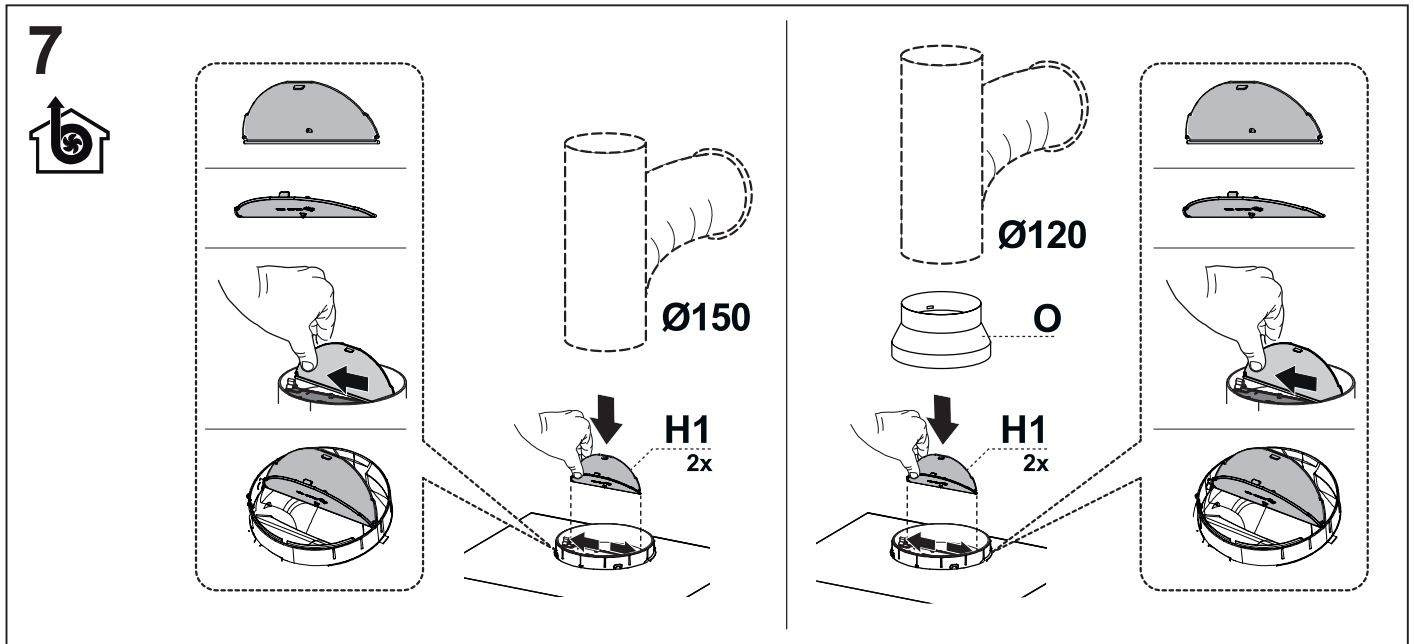    


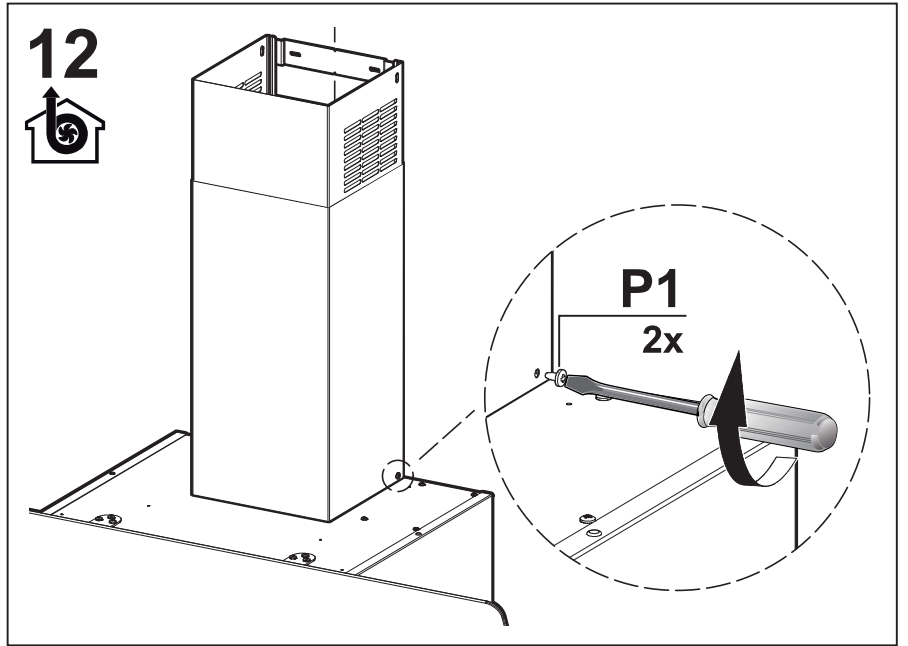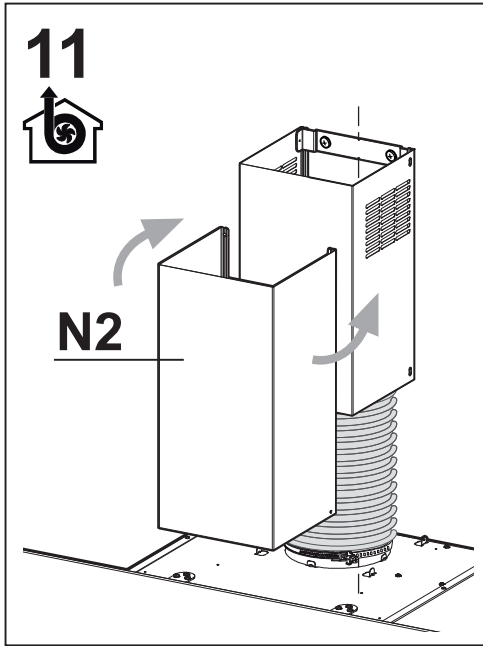  


13

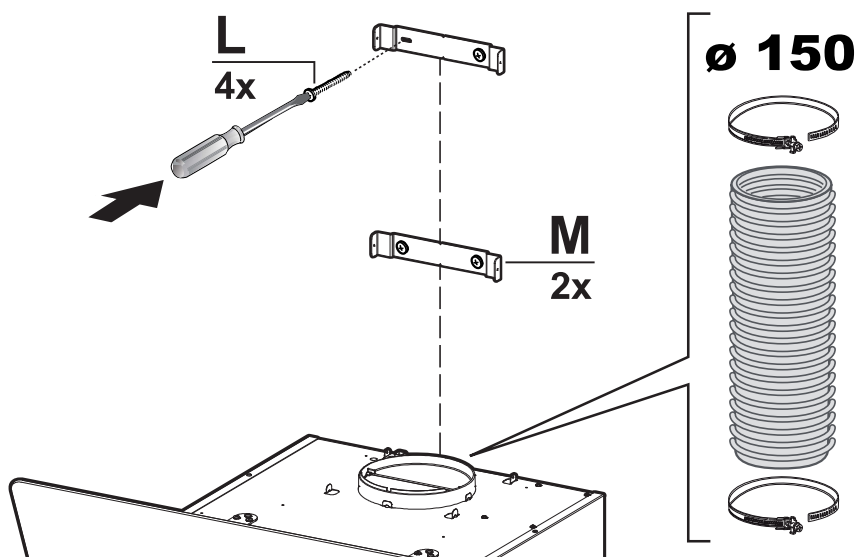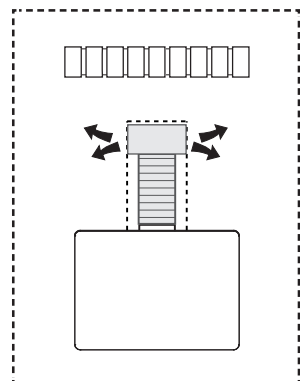  


14

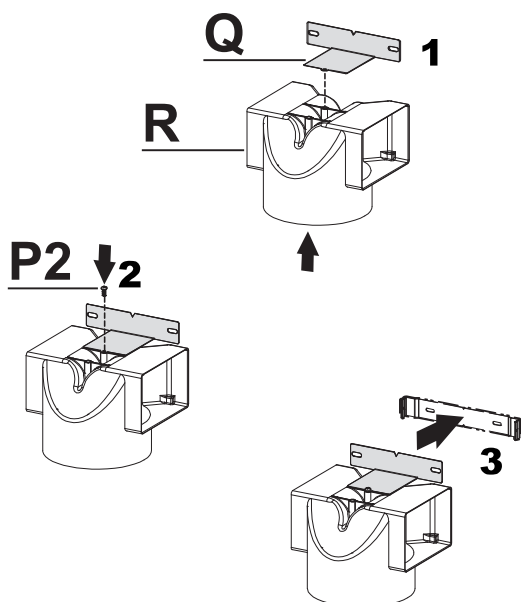 


15



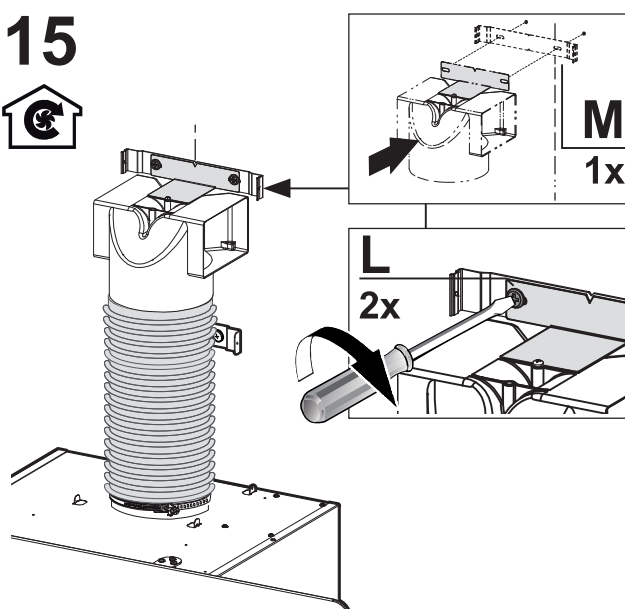 






16


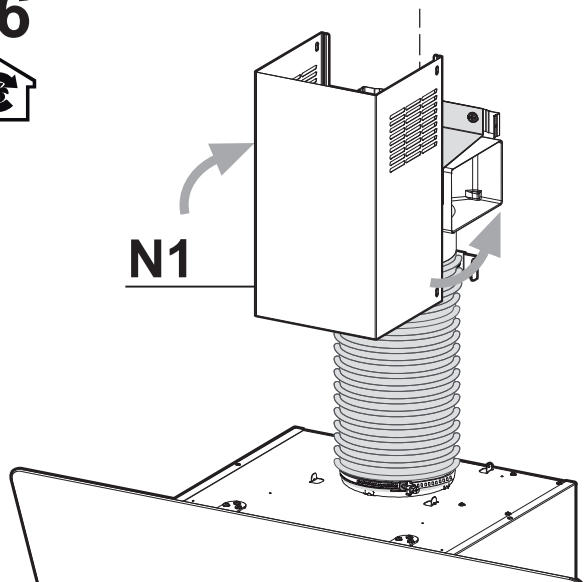 


17

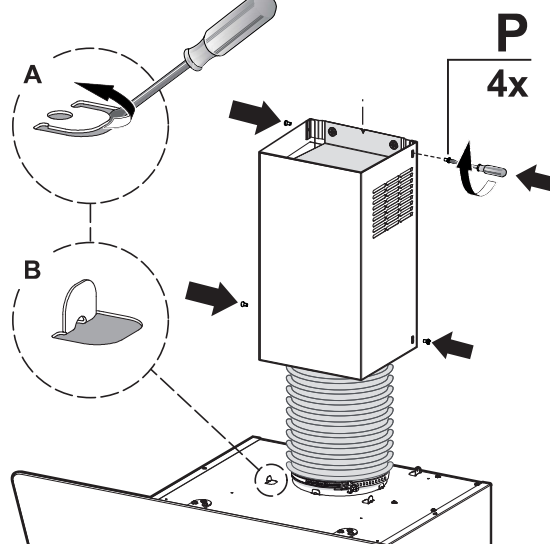 

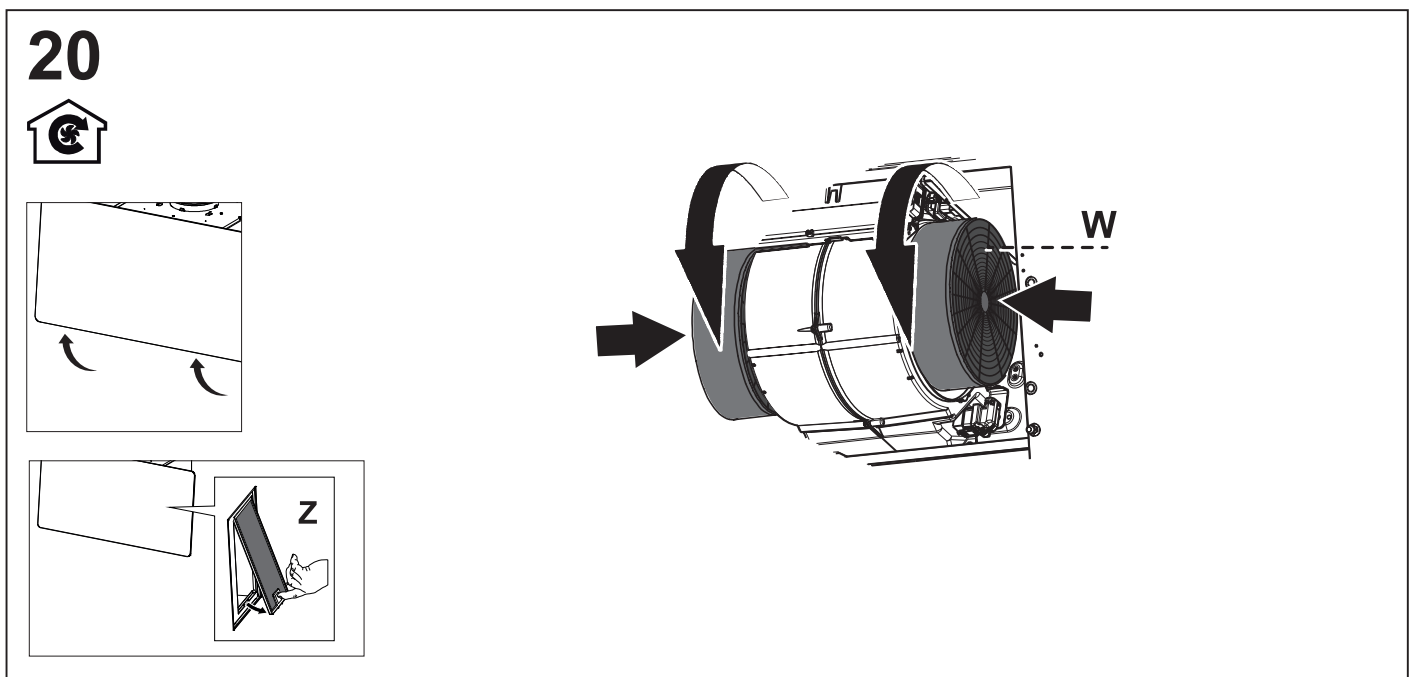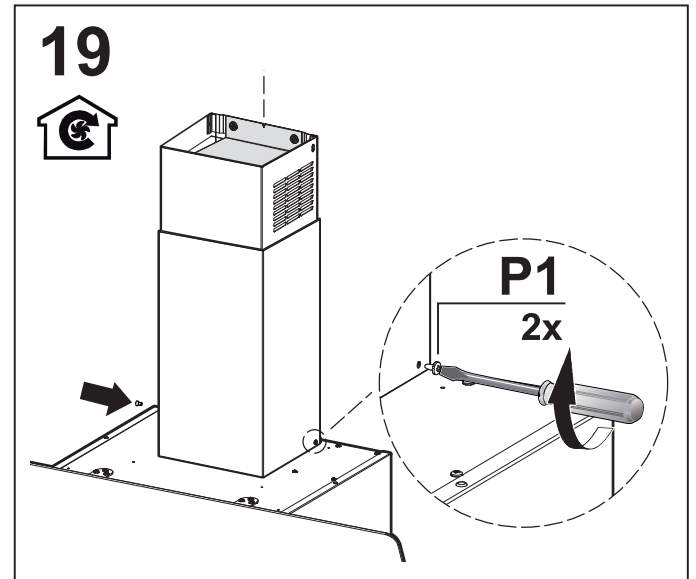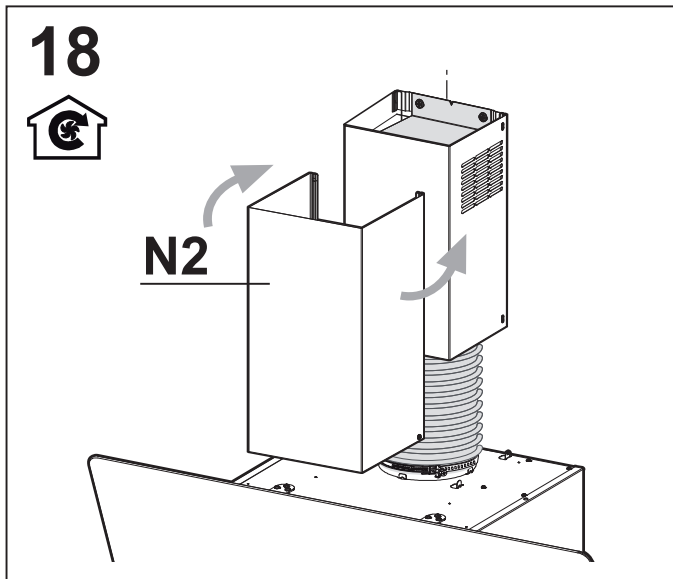   

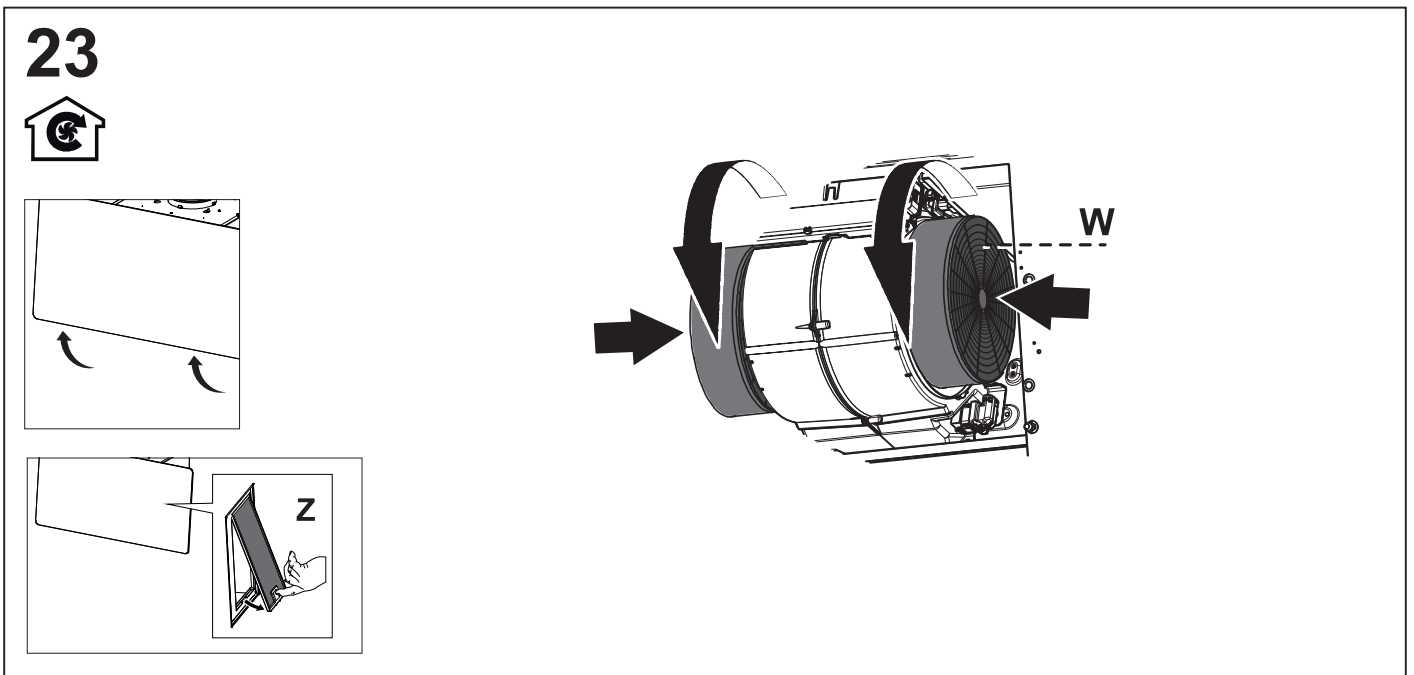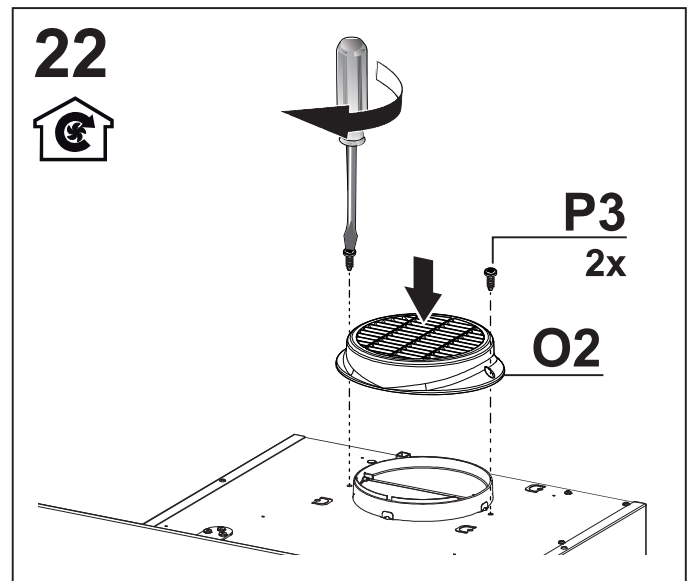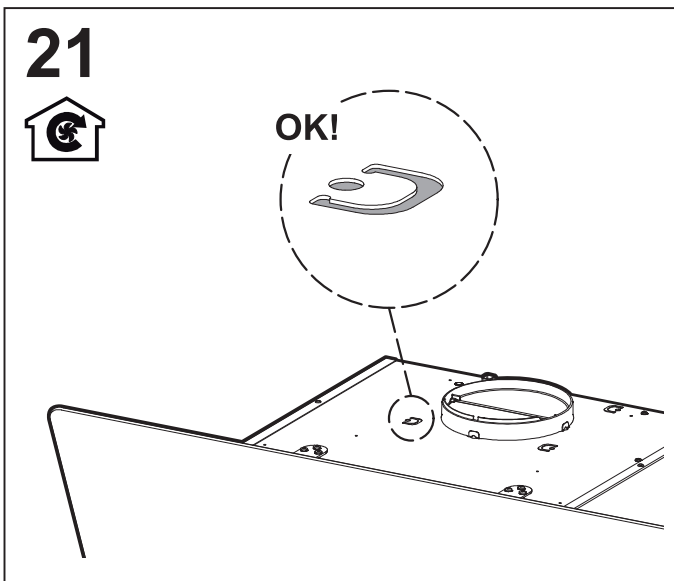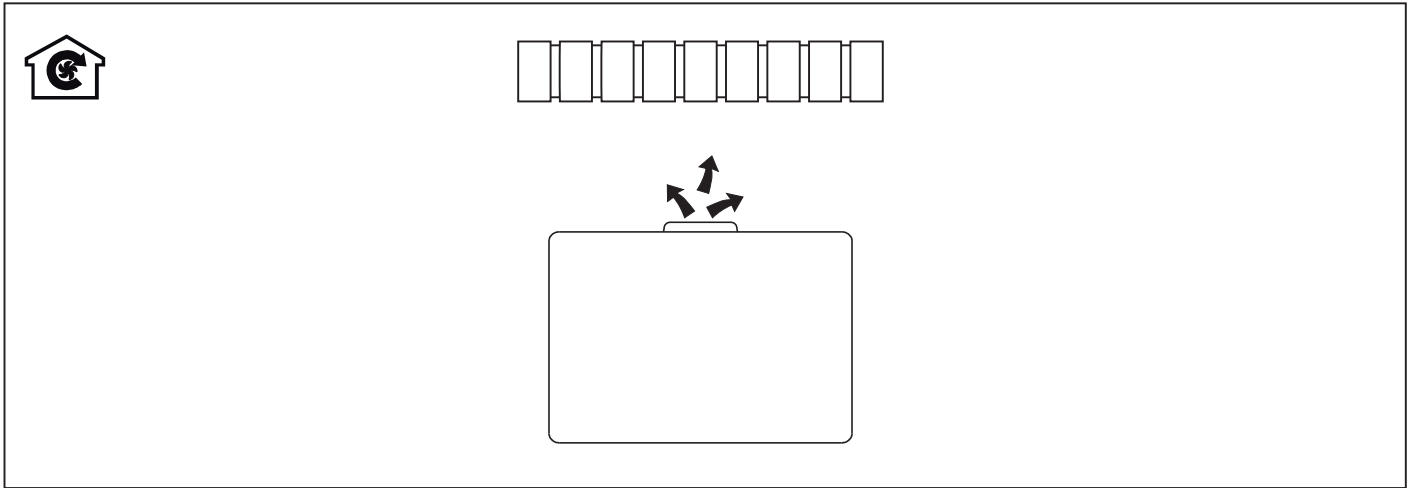    

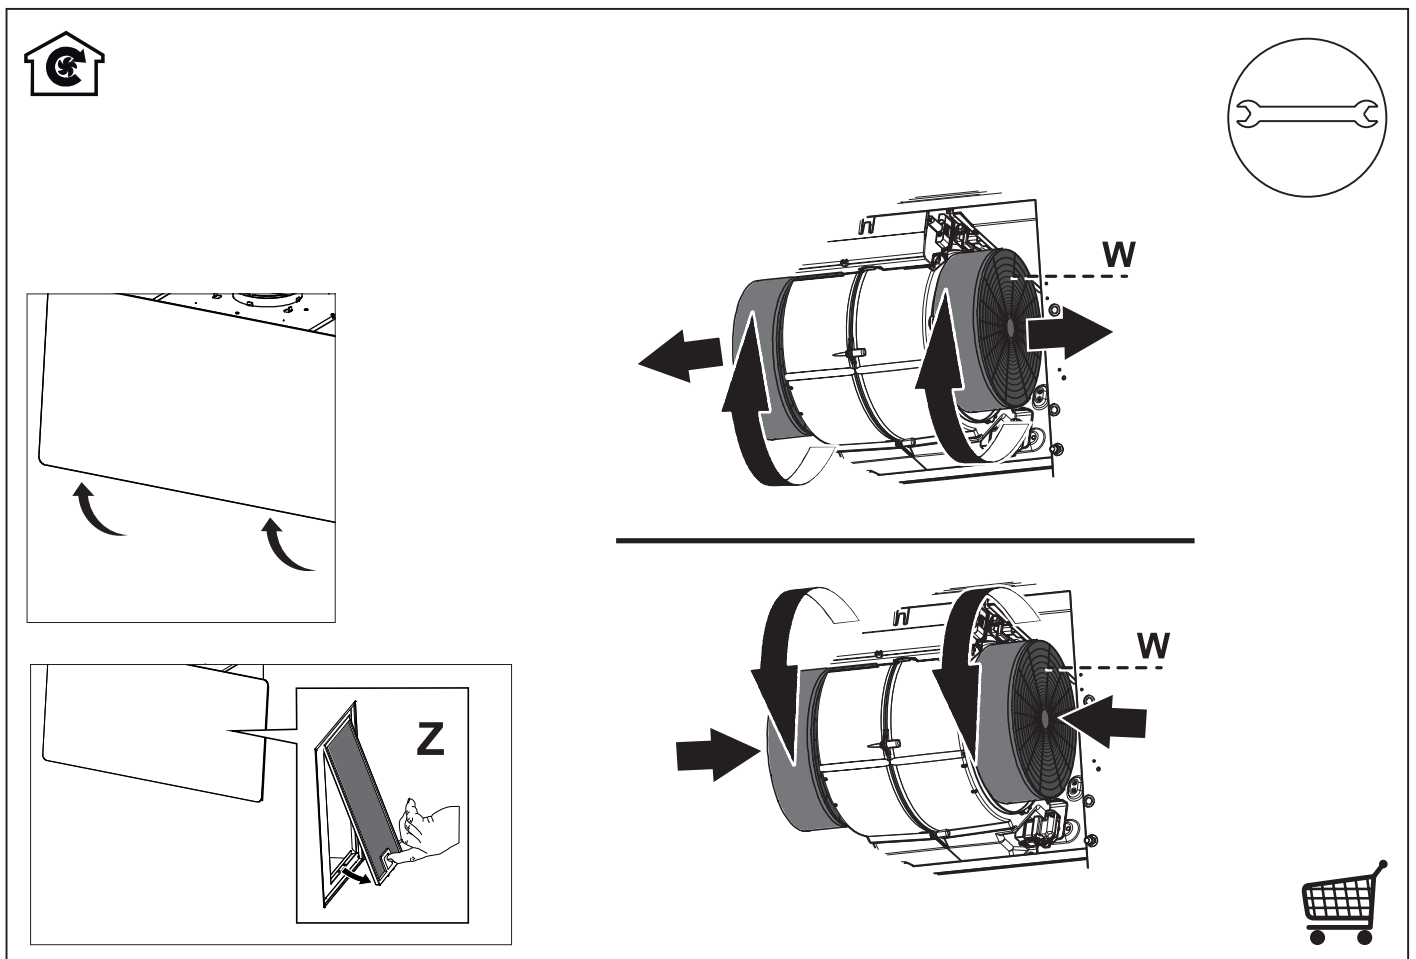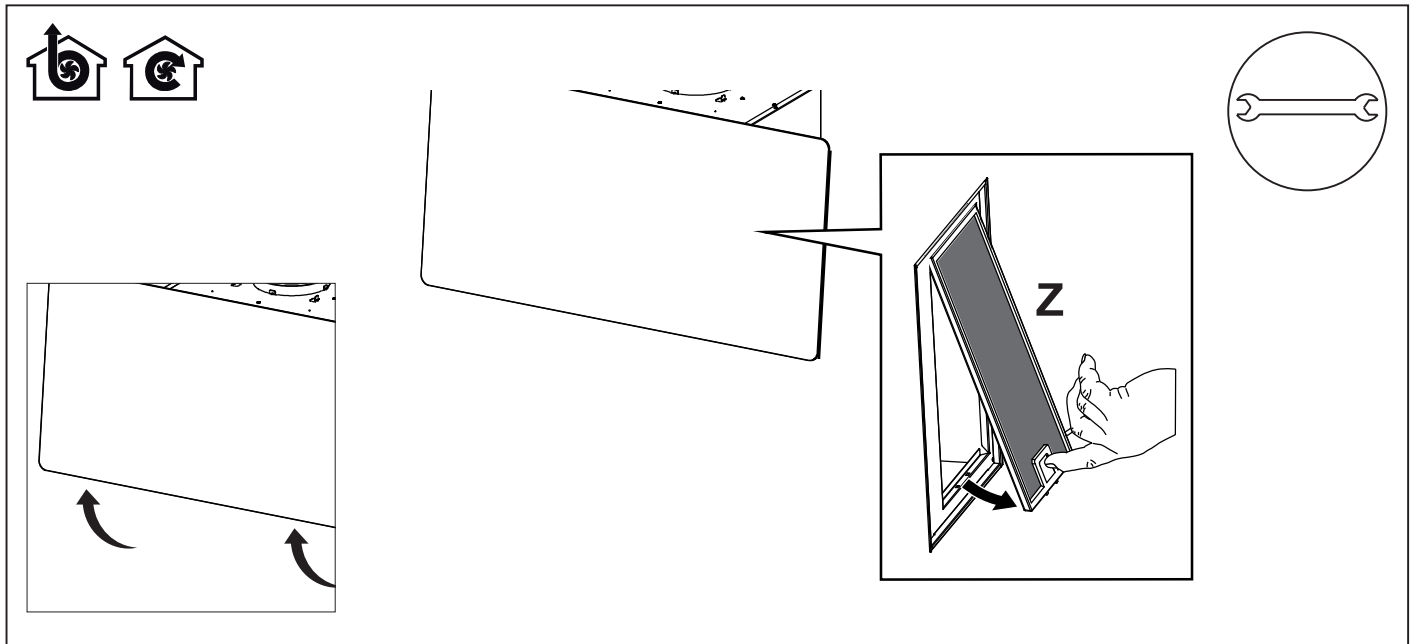  



Franke UK Ltd.
MIOC, Suite 1, Styal Road
Manchester
M22 5WB
www.franke.com/gb/en/hs.html