 


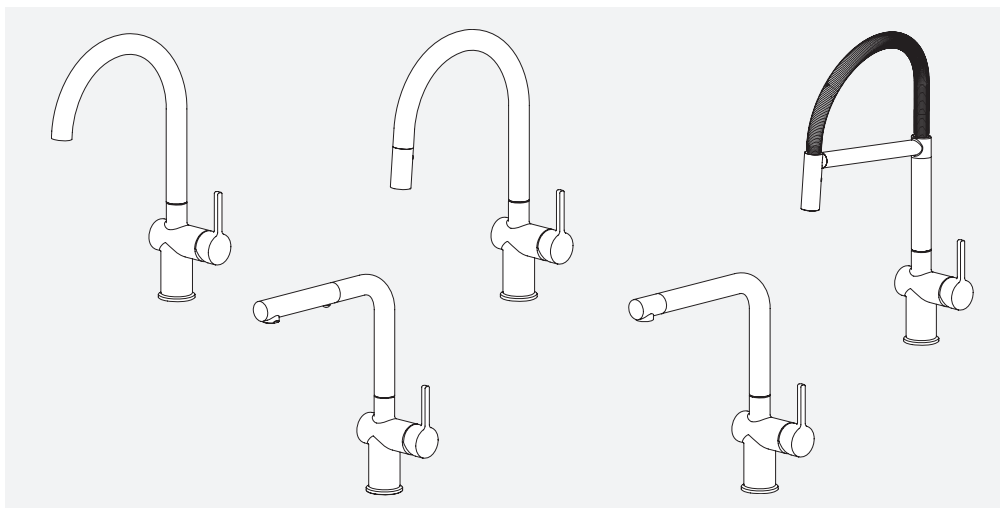

ACTIVE

EN Installation and service manual

 
 
 
*Semi-pro not in UK range








Swivel spout L shape

A

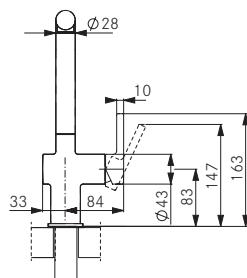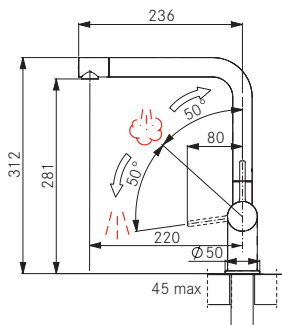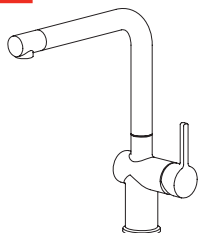




B

   Swivel spout J shape

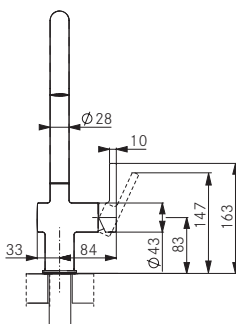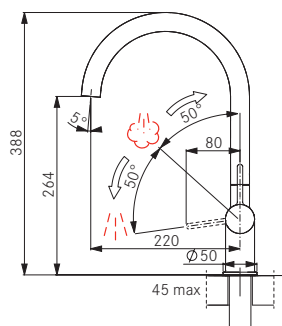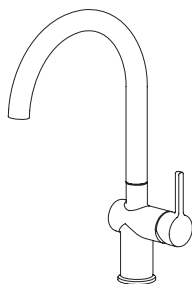


C

   
Semi-pro 2 jets

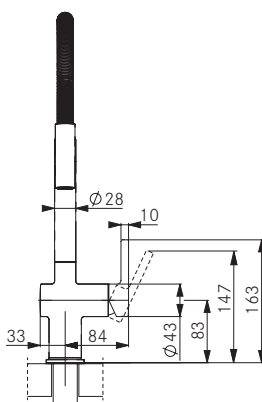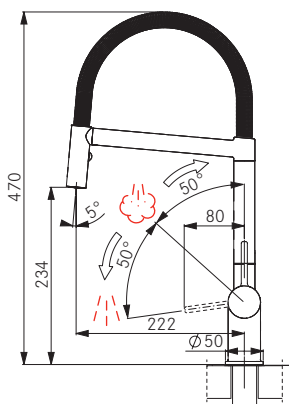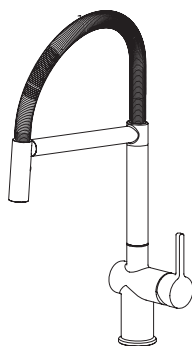


D Pull - out L shape 2 jets

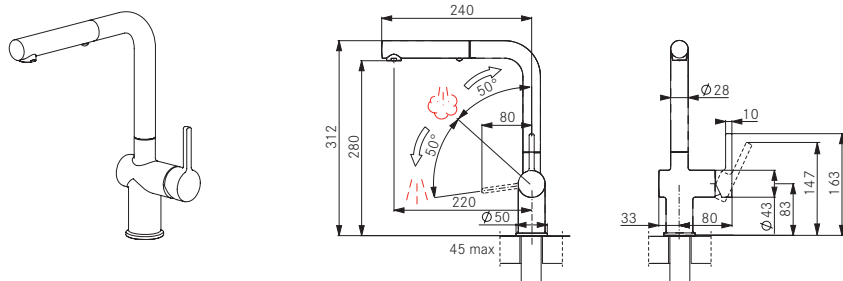 


E Pull - down J shape 2 jets

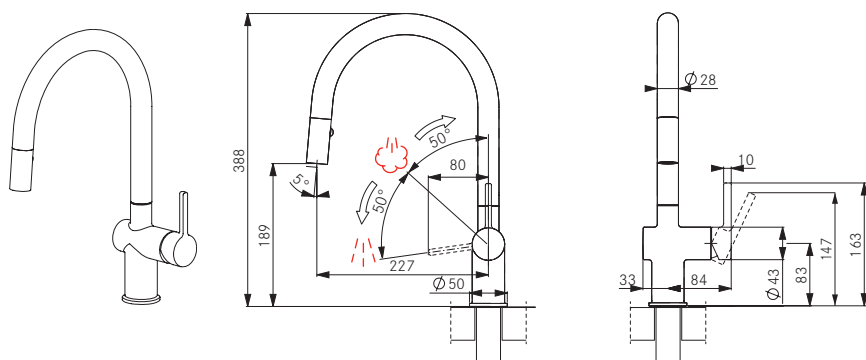 


F Window Swivel spout

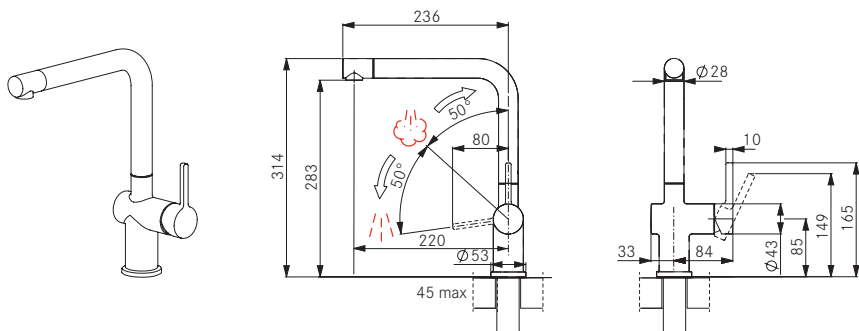 


G Window pull-out 2 jets

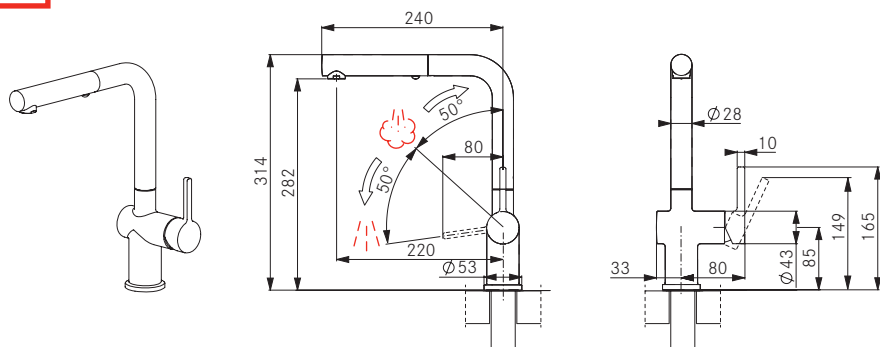 

H Window Swivel spout LP

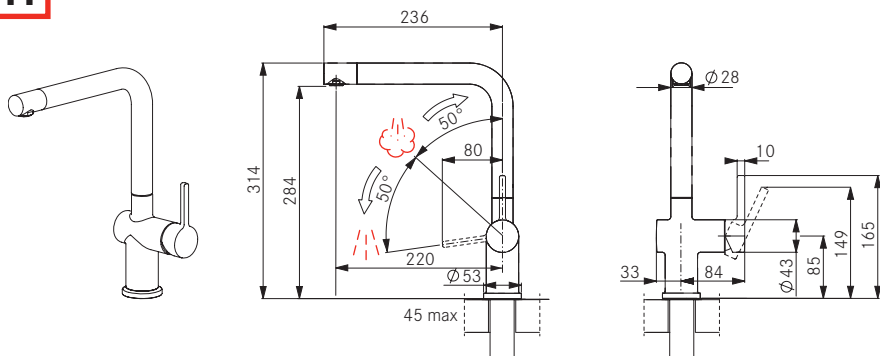 


I Window pull-out 1 jet LP

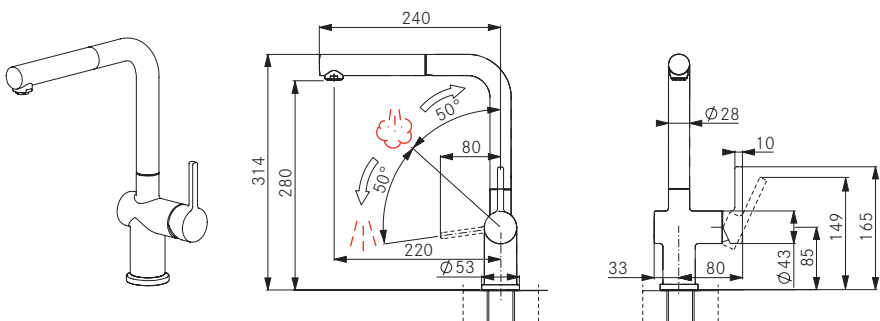 


i

1

 C

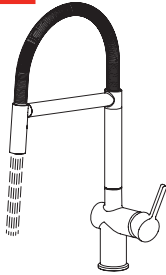


2

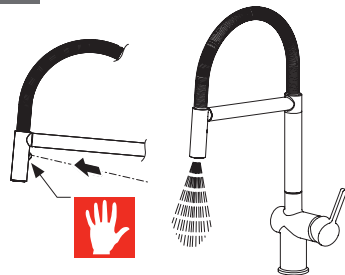 


i

1

 D

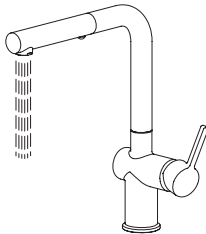


2

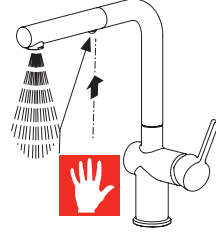 


i

1

 E

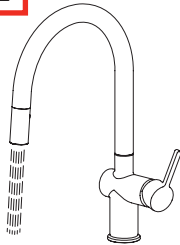


2

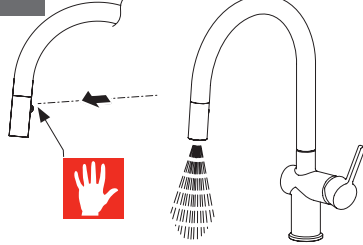 


i

1

 
G

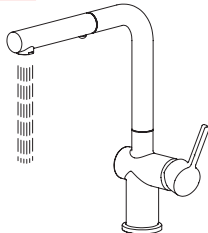



2

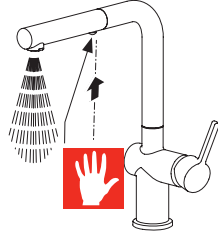 

i F H

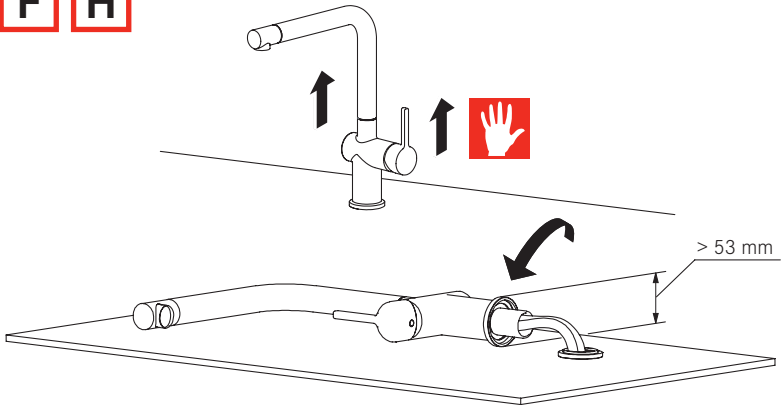 


i G I

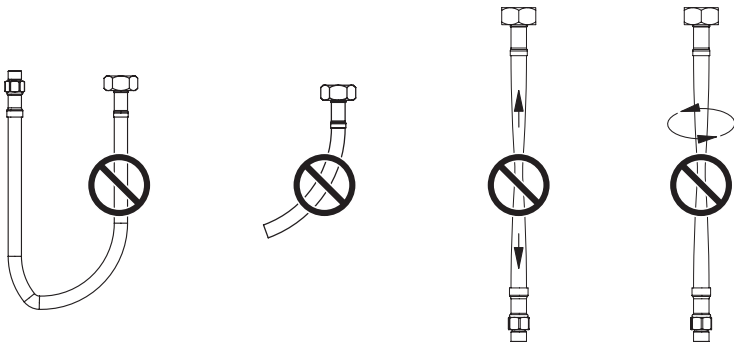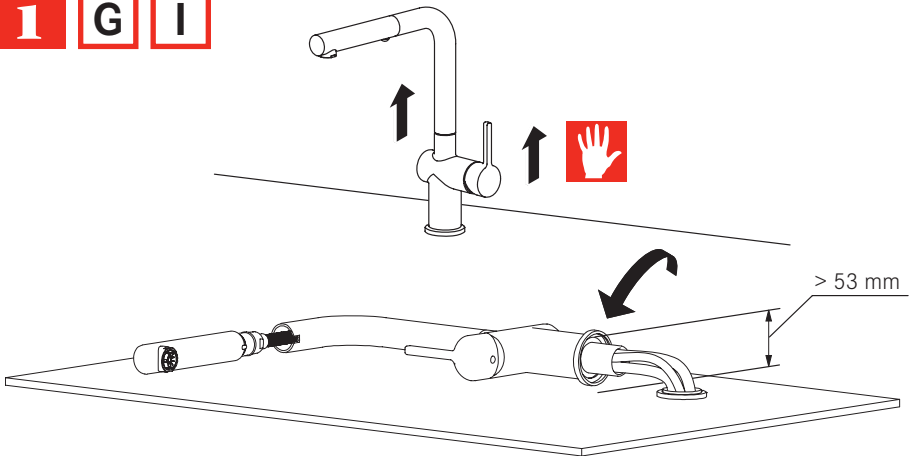  



**1****A****B****C****F****2** $\varnothing$ 35 mm max

 45 mm max

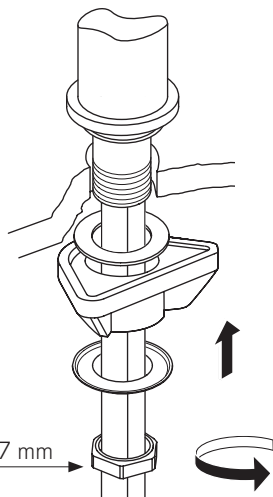



37 mm

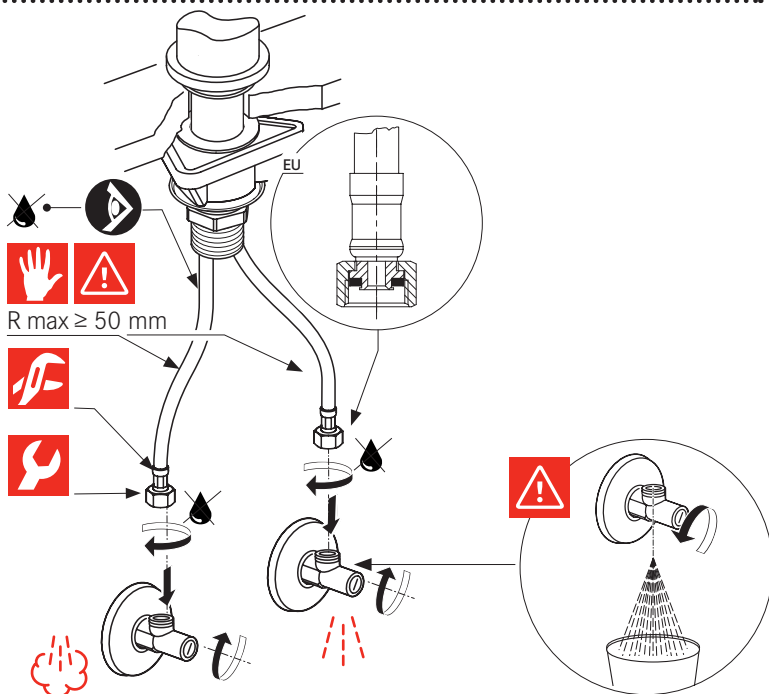 3

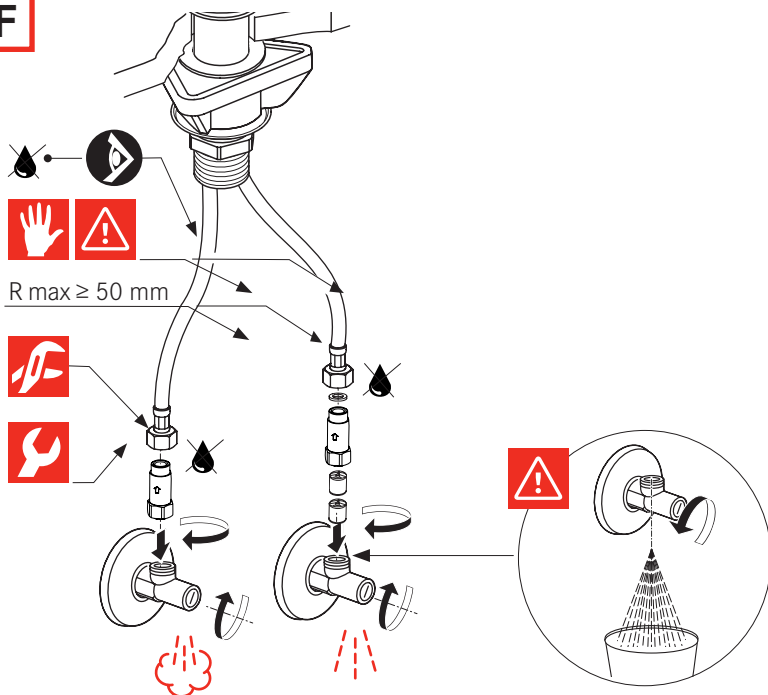 

G

  2

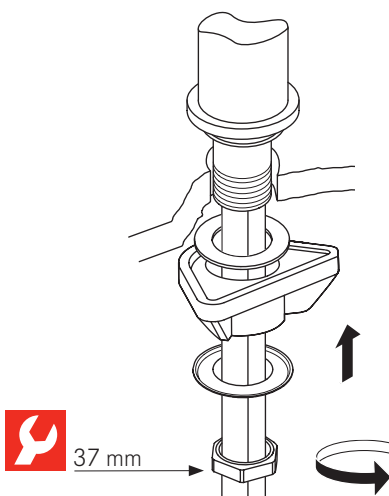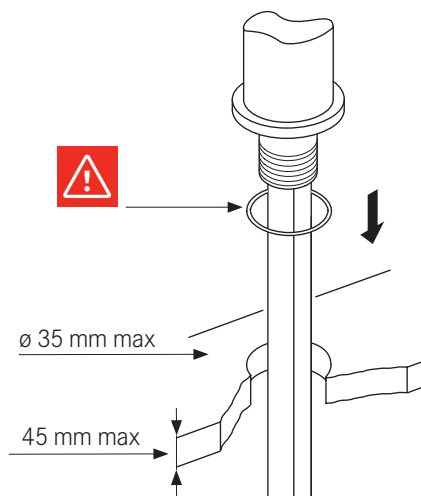

4

EU

R max $\geq$ 50 mm

G !

! !

!

1

 
H I

2

37 mm


3

H

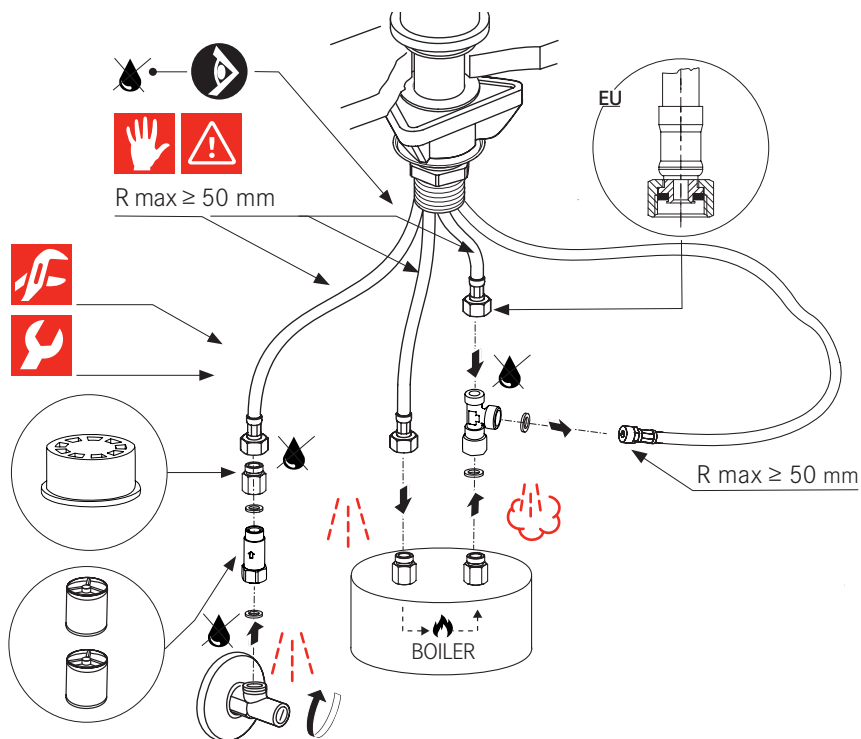

3

 I

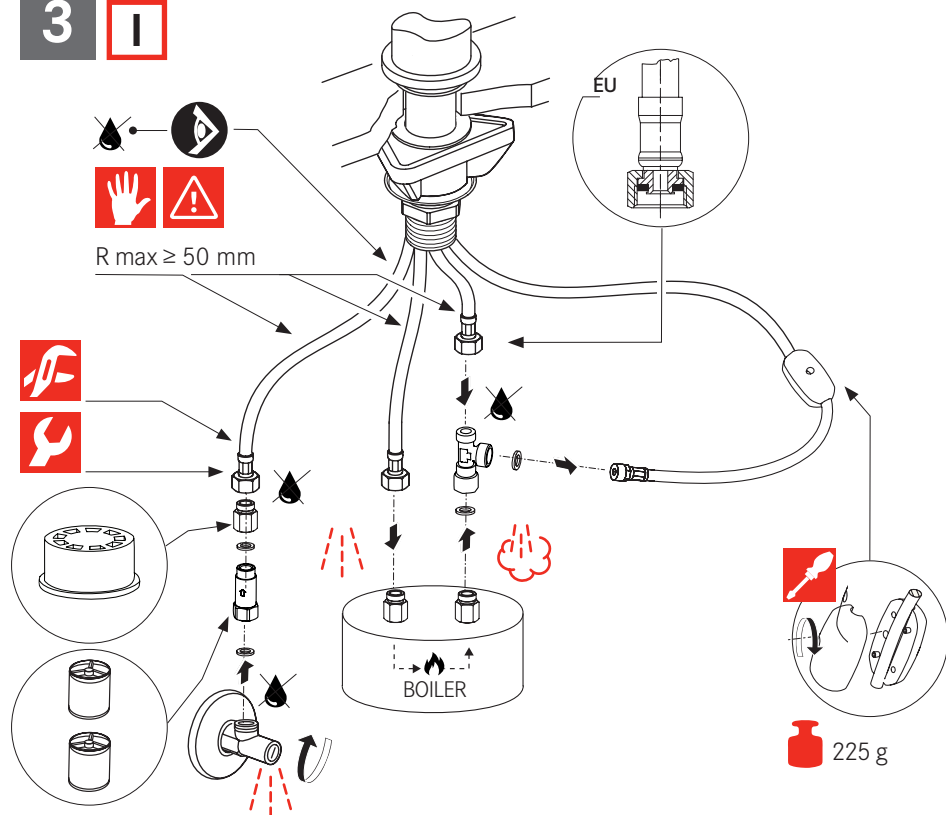

i

A

B

C

D

 
 
E

 
 
 
 
 
 
 
 
 
F

 
 
 
 
 
 
 
 
G










H

I

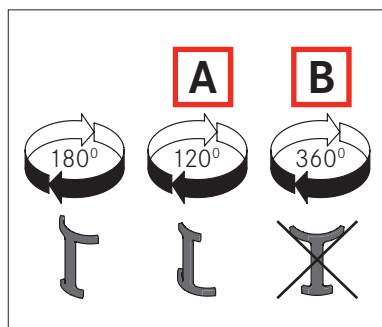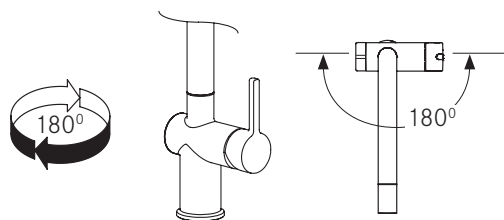


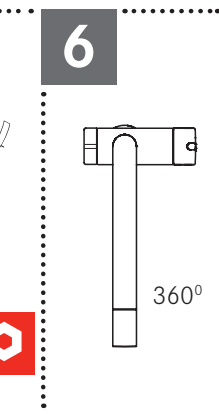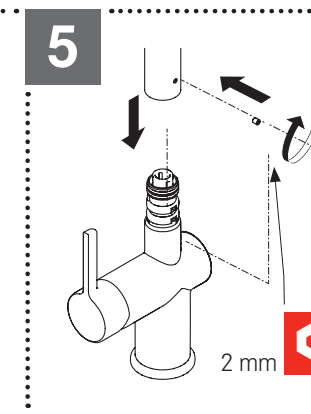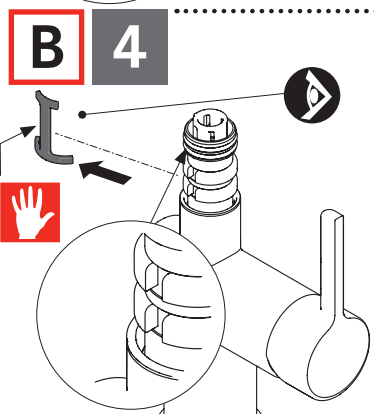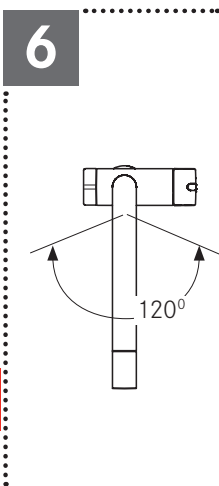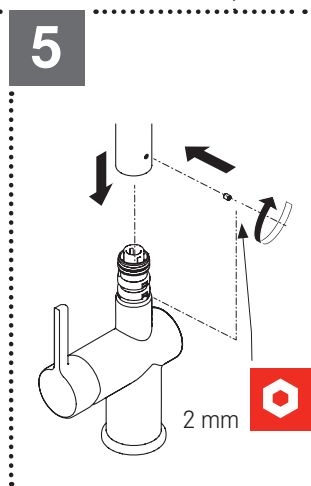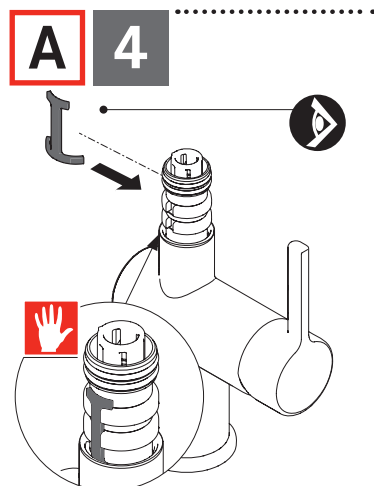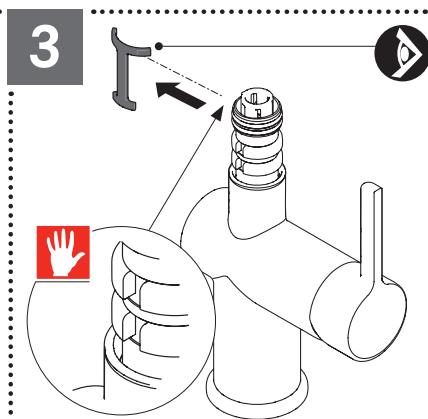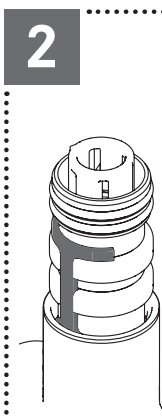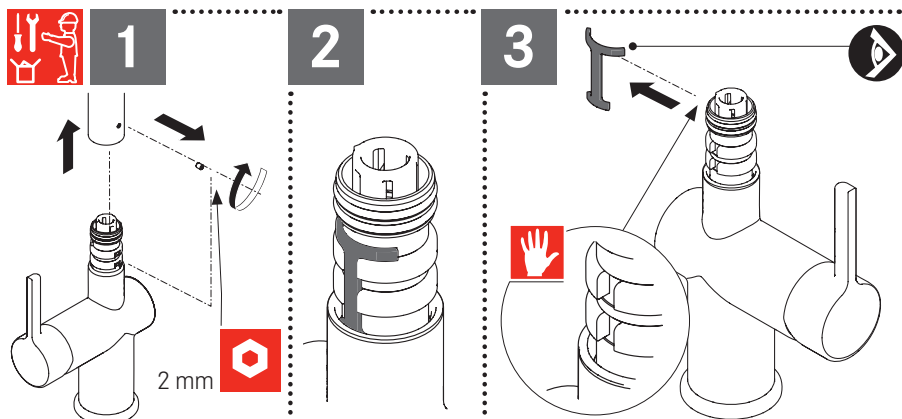

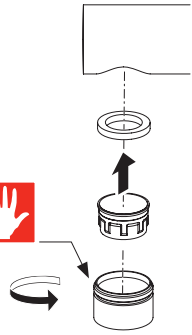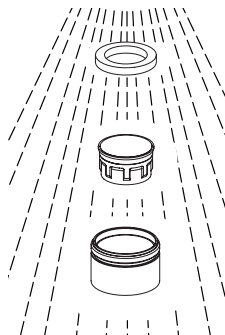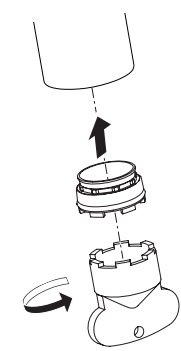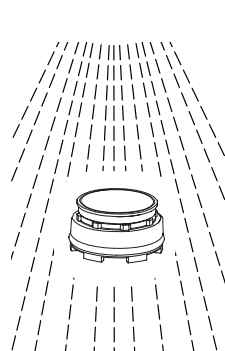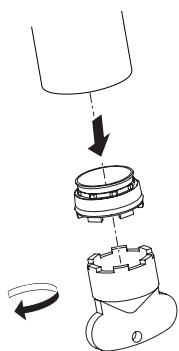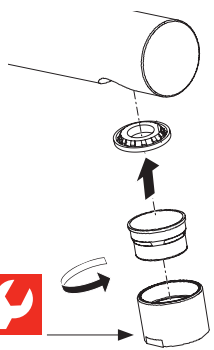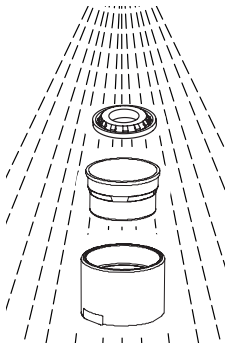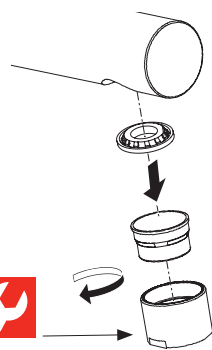
**1****A****F****2****A****F****3****A****F****1****B****2****B****3****B****1****D****G****2****D****G****3****D****G**

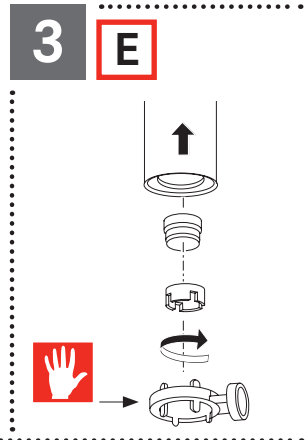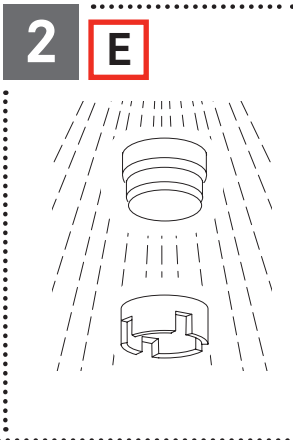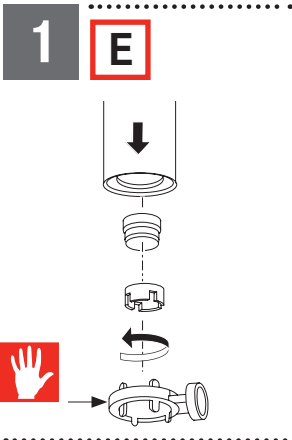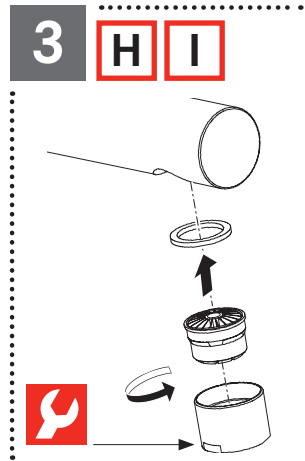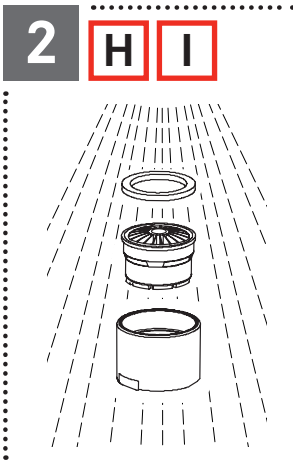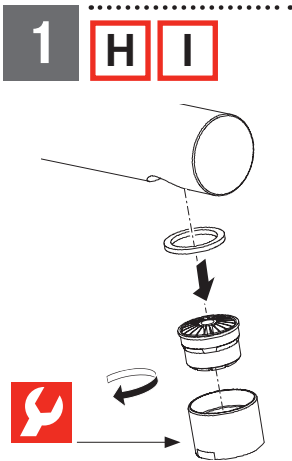      
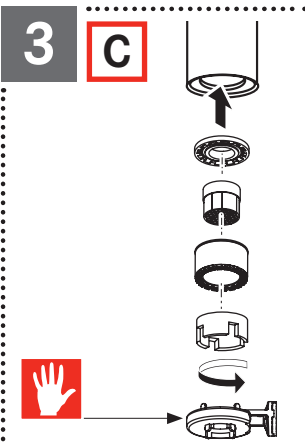 
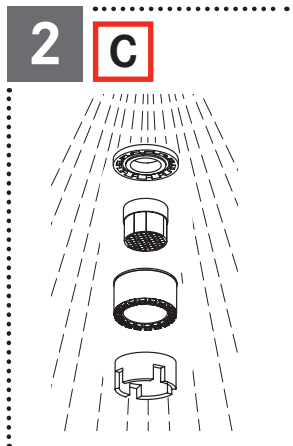 
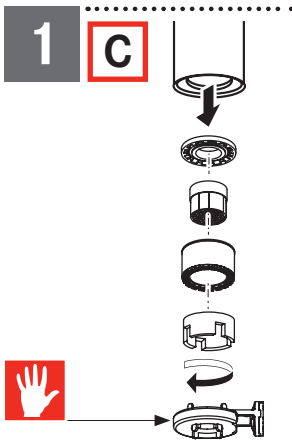 


i **C** **D** **E** **G**

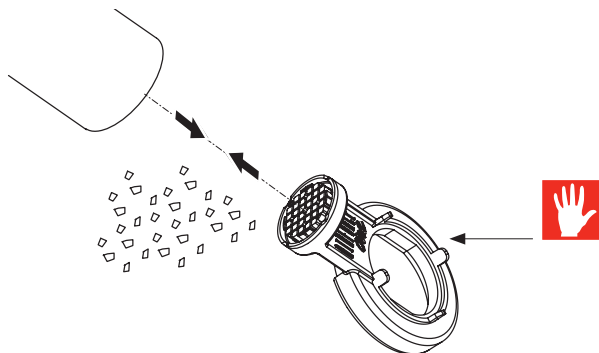 

     A **B** **C** **D** **E** **F** **G** **H** **I**

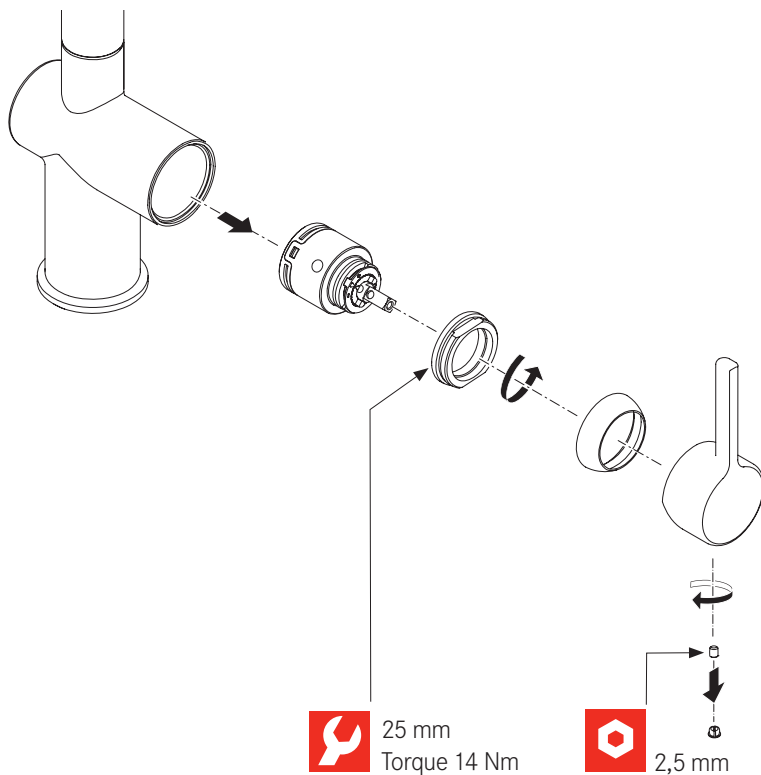

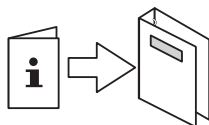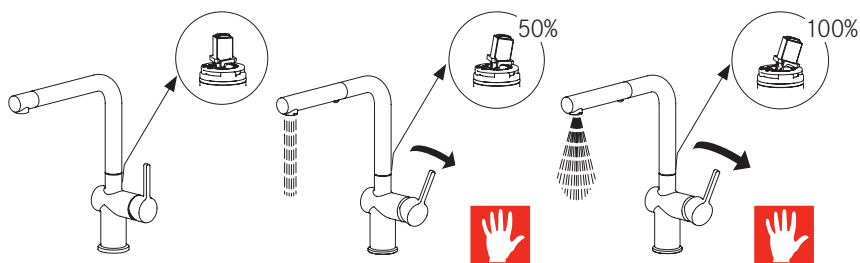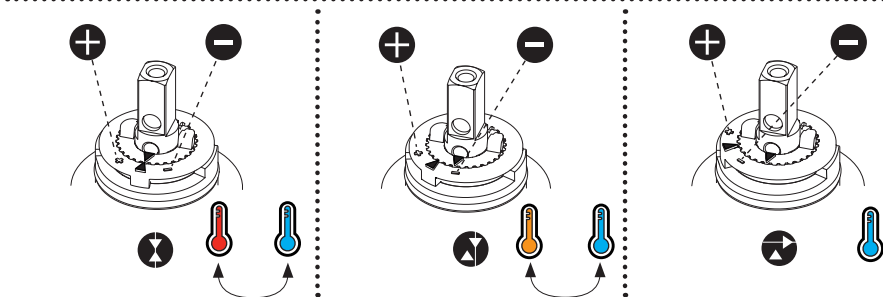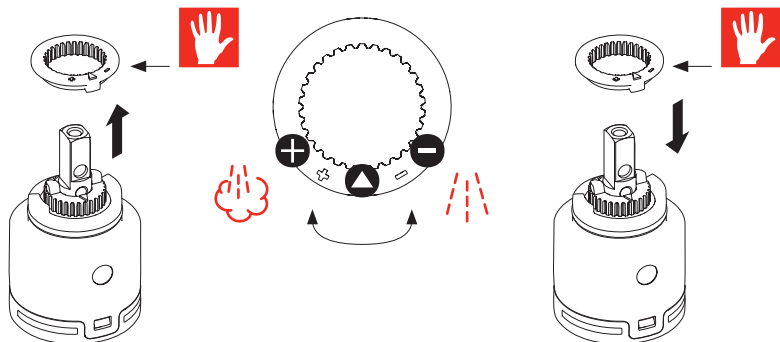

www.franke.com



Periodic checks

- ▶ Check connection and shower hoses periodically for the following:
 - Watertightness
 - Corrosion
 - Mechanical damage
- ▶ Use original spare parts only.
- ▶ Replace damp or dripping hoses.
- ▶ Replace hoses with rusty or oxidized surfaces.
- ▶ Replace hoses that show signs of mechanical damage.

Replacement of the flexibles

- ▶ Don't use a wrench or other items to mount the flexibles on the tap side.
Mount these only by hand.



- ▶ Flush all pipes thoroughly before installation.

Operating data	Value		
Operating pressure (ideal)	3 bar	45 PSI	300 kPa
Operating pressure (max.)*	5 bar	70 PSI	500 kPa
Operating pressure (min.)*	1 bar	14.5 PSI	100 kPa
Water temperature (ideal)	60 °C	140 °F	
Water temperature (max.)	70 °C	158 °F	

* Equal pressure is recommended.

- ▶ How to use the flow reducers:

Pressure on the water network	Reducers
From 0 to 2 bar	Not needed
From 2 to 4 bar	Shortest one
From 4 to 6 bar	Longest one
Over 6 bar	Reduce the flow through the wall input angle valve or through the pressure reducer on the upstream of the plant

www.franke.com

United Kingdom

Franke UK Ltd.
Manchester M22 5WB
Phone +44 161 436 6280

