Fragranite products Instruction on sink bowing measurement



Inset and Flushmount installation - maximum acceptable values in mm



		Inset incl. Easy Flushmount installation					
	Sink type		Sink l	en	ngth		
		< 500 mm			> 500 mm		
	\	Α	В		А	В	
One/one & half bowl sink with drainer	611/651	Not existing			3 mm	2 mm*	
Double bowl sink with drainer	621						
One bowl sink w/o drainer	610	1 mm			2 mm	1 mm	
Double bowl sink w/o drainer	620	Not existing					

		Flushmount installation					
	Sink type	Sink length					
		< 500 mm			> 500 mm		
	V	А	В		Α	В	
One/one & half bowl sink with drainer	211/251	Not existing			2 mm*		
One bowl sink w/o drainer	210	1 mm			2 mm	1 mm	
Double bowl sink w/o drainer	220	Not existing			2 111111	1 1111111	

^{*} sink w/o fixation - maximum acceptable bowing 1 mm

^{*} short side w/o fixation - maximum acceptable bowing 1 mm


How to measure sink bowing?





The measurement must be carried out on an absolutely flat surface.


How not to measure sink bowing.

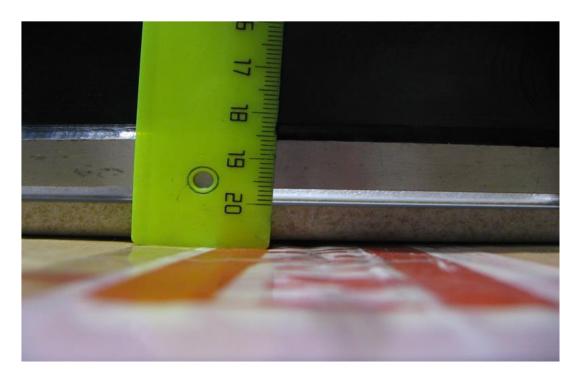



Do not measure bowing using rulers or any other unprecise measuring tools.

Undermount installation – maximum acceptable values in mm

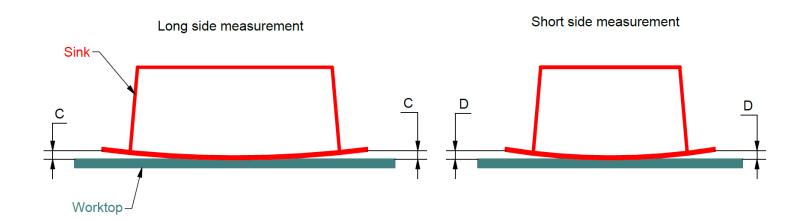

		Undermount installation					
	Sink type						
		< 500 mm			> 500 mm		
	\	С	D		С	D	
One/one & half bowl sink with drainer	111	Not existing					
One bowl sink w/o drainer	110	1 mm		2 mm			
Double bowl sink w/o drainer	120	Not existing					

CONTACT

Branislav Pasnišin

Product Engineer

Franke Slovakia s.r.o.
SNP 840 / 180
013 24 Strecno
Slovakia
Phone +421 910 644 202
branislav.pasnisin@franke.com I www.franke.com

