




- 1 To position Sink/Basin on worktop, place upside down on worktop and mark position on worktop. offset the line 8mm inwards and mark cutline.

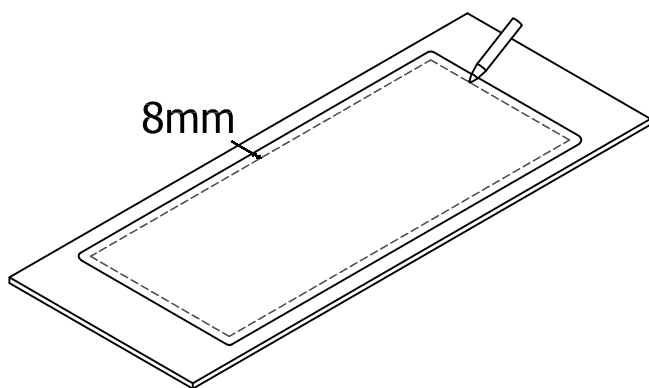


- 2 Cut the inside line on the worktop with your saw.

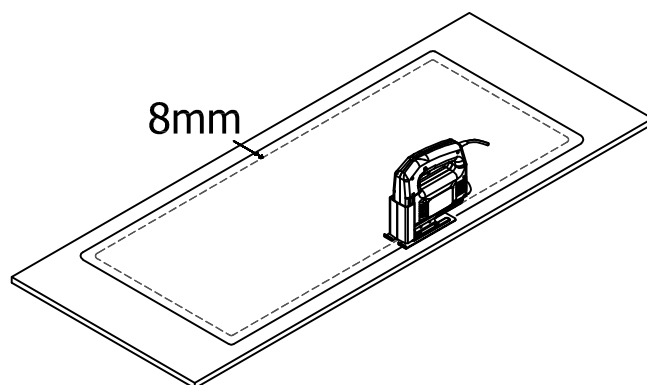


- 3 To Seal around edge of the worktop cutout, paint edge with enamel paint.

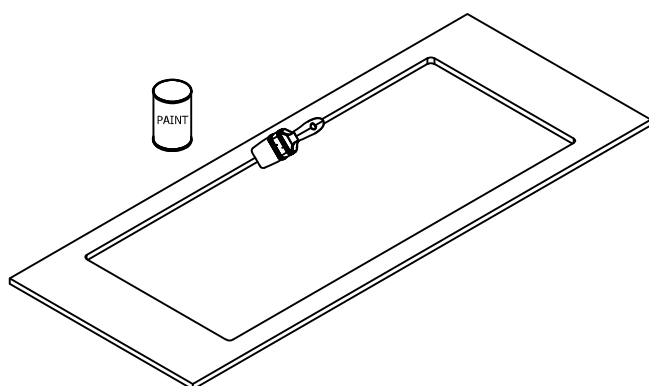


- 4 Fix Sink Clips to underside of Sink/Basin by knocking the clip pin into hole on the underside of sink. Use a hammer and a length of bar or the back of a screw driver.

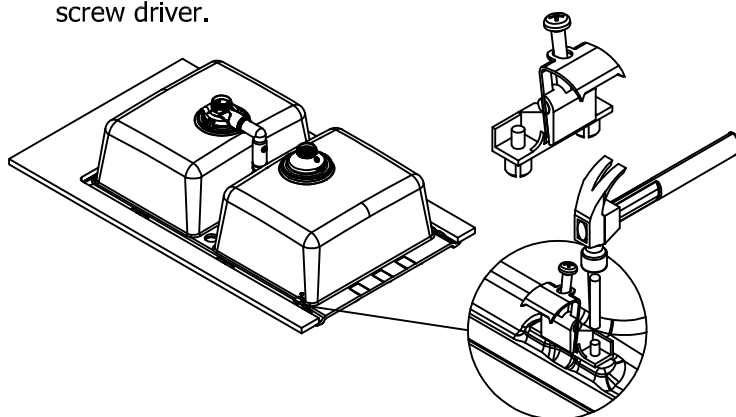

- 5 Put a bead of sealant around the top edge of cutout to seal the Sink/Basin to the worktop and to stop water from leaking into your cupboard.

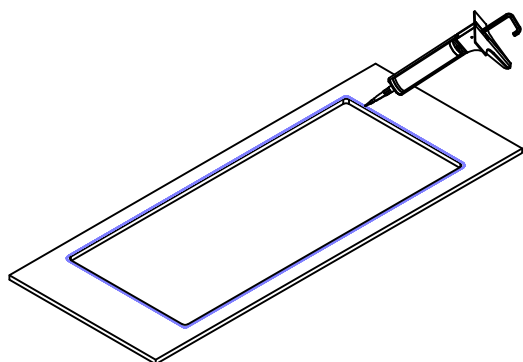

- 6 Place Sink/Basin into worktop, and position it correctly.

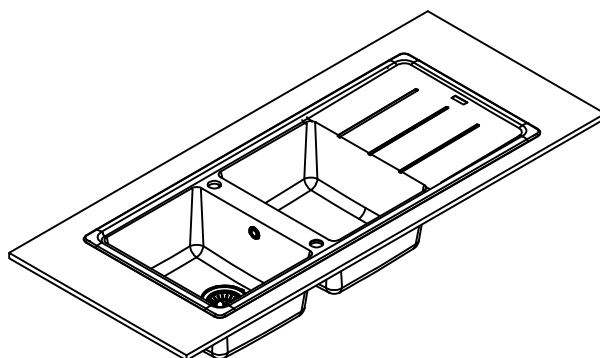

- 7 Fasten Sink Clips to underside of worktop. Leave for 12-24 hours for sealant to set before starting on the plumbing.

