



MARIS MRG621 / BASIS BFG621 INSTALLATION INSTRUCTIONS


1. To position sink on worktop, place upside down on worktop and mark position on worktop. offset the line 8mm inwards and mark cutline.

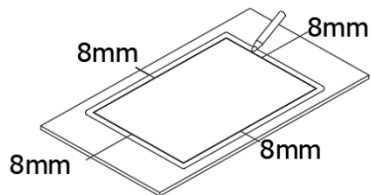


2. Cut the inside line on the worktop with your saw.

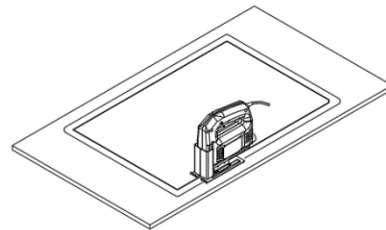


3. To seal around edge of the worktop cut-out, paint edge with enamel paint.

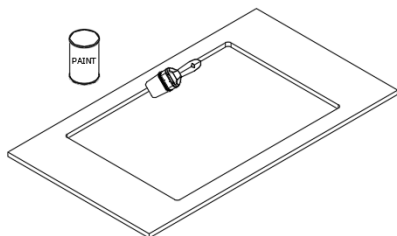


4. Fix sink clips to underside of sink/basin by knocking the clip pin into hole on the underside of sink. Use hammer and a length of bar or the back of a screwdriver.

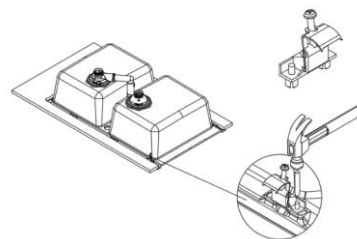

5. Put a bead of sealant around the top edge of cut-out to seal the sink/basin to the worktop and to stop water from leaking into your cupboard.

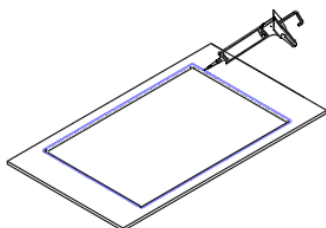

6. Place sink/basin into worktop, and position it correctly.

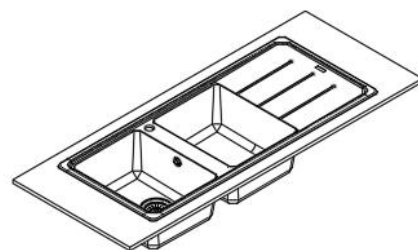

7. Fasten sink clips to underside of worktop. Leave for 12-24 hours for sealant to set before starting on the plumbing.

