



SIRIUS SID110-34 UNDERMOUNT INSTALLATION INSTRUCTIONS


1. Place sink upside down on worktop and mark position on worktop. Offset the line 15mm from the back and front and 12.5mm inwards from each end and mark cutline.

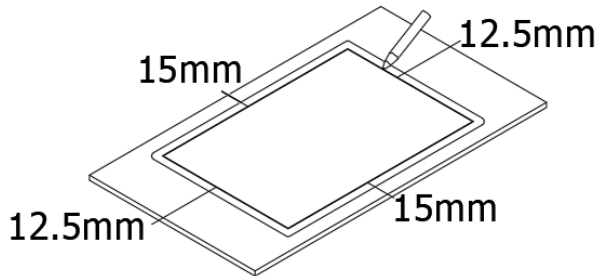


2. Cut the inside line on the worktop with your saw.

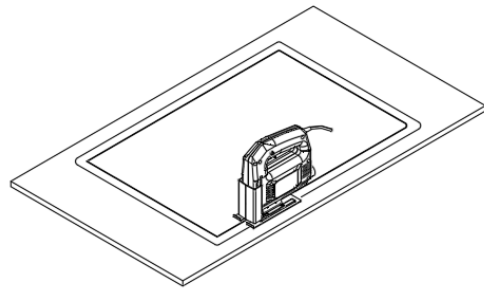

3. Seal around the edge of the worktop cut-out, paint edge with enamel paint. (Where applicable)

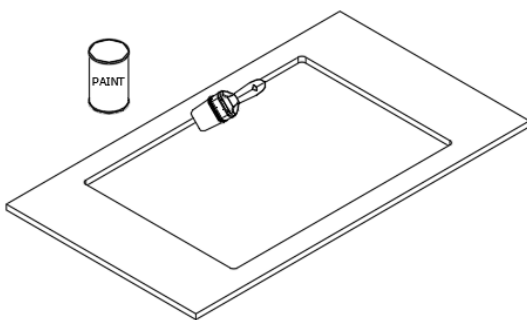


4. Draw a line 28mm from cut-out, use this as a center line to drill the insert holes 11mm in diameter for M6 inserts.

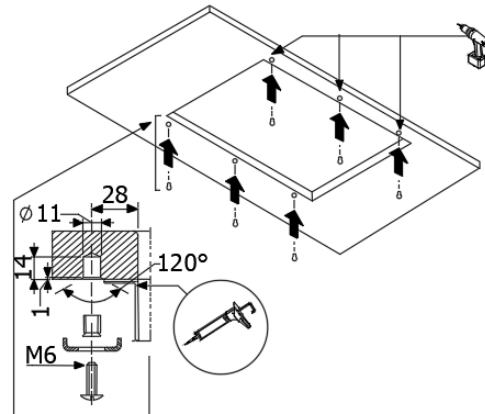

5. Put a bead of sealant around the top edge of the sink to the worktop, this is to prevent water from leaking into your cupboard.



6. Put a bead of sealant inside the holes that have been drilled in your worktop and insert the studs. Position it correctly then press the sink into worktop firmly. Use a screwdriver to tighten the clips on the sink to the worktop and leave for 24 hours to let sealant dry, thereafter complete the plumbing installation.

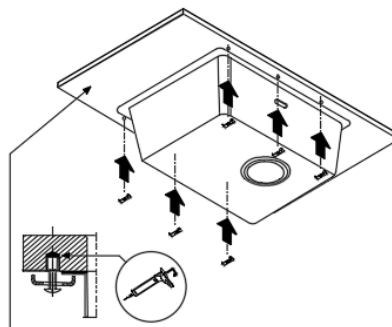

DRILLING A TAP HOLE IN TECTONITE

1. Place the sink upside down, the standard location of the taphole is marked underneath the sink.



2. Start drilling from the back of the sink, using a 4mm drill bit or the bit supplied with the 35mm hole saw.



3. When this hole is drilled, turn the sink around and start drilling from the top using a 35mm hole saw at a low speed.

