



Urban UBG621 & Urban City UCG621 Sinks


1. To position Sink/Basin on worktop, place upside down on worktop and mark position on worktop. offset the line 16mm inwards and mark cutline.

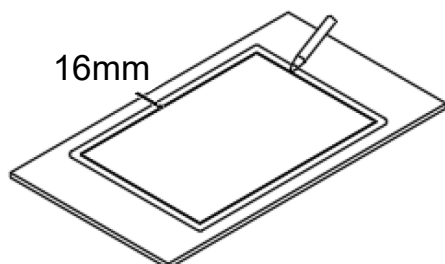


2. Cut the inside line on the worktop with your saw.

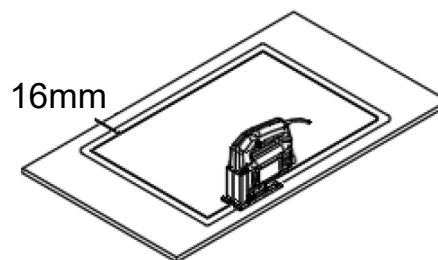


3. To Seal around edge of the worktop cutout, paint edge with enamel paint.

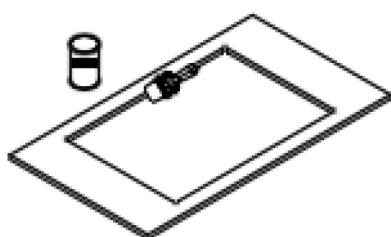


4. If you are going to mount the Tap/Mixer onto the sink, you can use the Diamond drill bit supplied to complete the semi drilled hole on the underside of the sink. Please ensure the sink drainer is on the correct side before drilling.

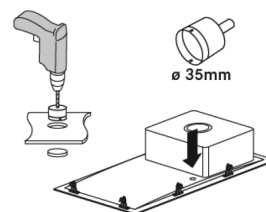

5. Mount the Tap/Mixer onto the sink and tighten all screws and water connections.

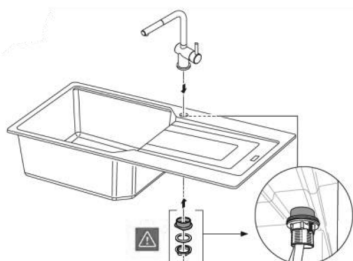

6. Put a bead of sealant around the top edge of cutout to seal the Sink/Basin to the worktop and to stop water from leaking into your cupboard.

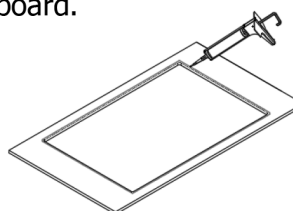

7. Position the sink correctly over the cutout then press Sink/Basin firmly into the worktop. Wipe off any excess silicone sealant from the edge of the sink, then leave it for 24 hours to set in place.

